


PUHY-EP200YJM-A(-BS)

Unit : mm

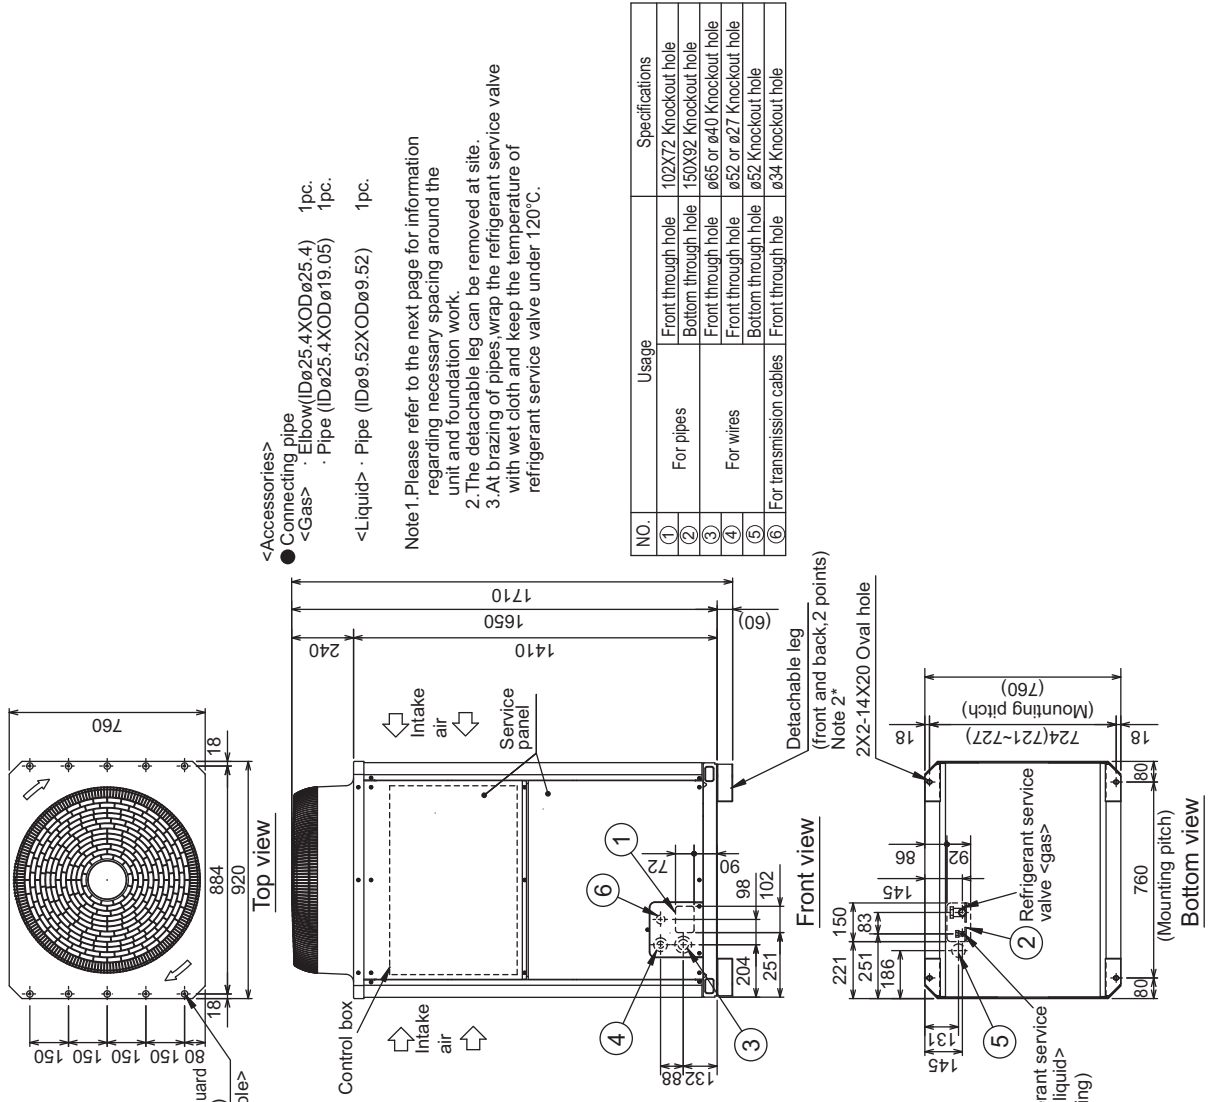

<Accessories>
 ● Connecting pipe
 <Gas> : Elbow (IDø25.4XODø25.4) 1pc.
 : Pipe (IDø25.4XODø19.05) 1pc.
 <Liquid> : Pipe (IDø9.52XODø9.52) 1pc.

Note 1. Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
 2. The detachable leg can be removed at site.
 3. At brazing of pipes, wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.

NO.	Usage	Specifications
①	Front through hole	102X72 Knockout hole
②	Bottom through hole	150X92 Knockout hole
③	Front through hole	ø65 or ø40 Knockout hole
④	Front through hole	ø52 or ø27 Knockout hole
⑤	Bottom through hole	ø52 Knockout hole
⑥	Front through hole	ø34 Knockout hole

Model	Position dimensions for the refrigerant service valve		Connection specifications for the refrigerant service valve*1	
	Liquid	Gas	Liquid	Gas
PUHY-EP200YJM	142	172	ø9.52 Brazed	ø19.05 Brazed

*1 Connect by using the connecting pipes (for bottom piping and front piping) that are supplied.

Y (HIGH COP)






PUHY-EP200YJM-A(-BS)

Unit : mm

Y (HIGH COP)

● In case of collective installation


- ① When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of unit as shown in the figures below.
- ② At least two sides must be left open.
- ③ As with the single installation, add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.
- ④ If there is a wall at both the front and the rear of the unit, install up to six units consecutively in the side direction and provide a space of 1000mm or more as inlet space/ passage space for each six units.

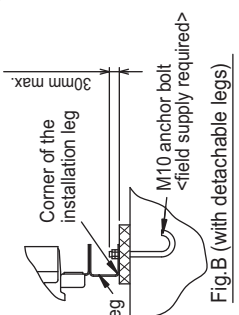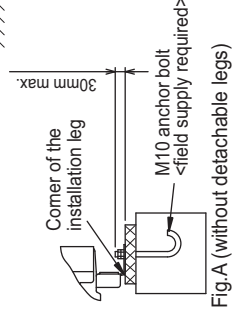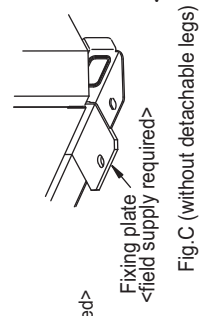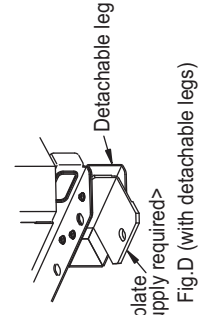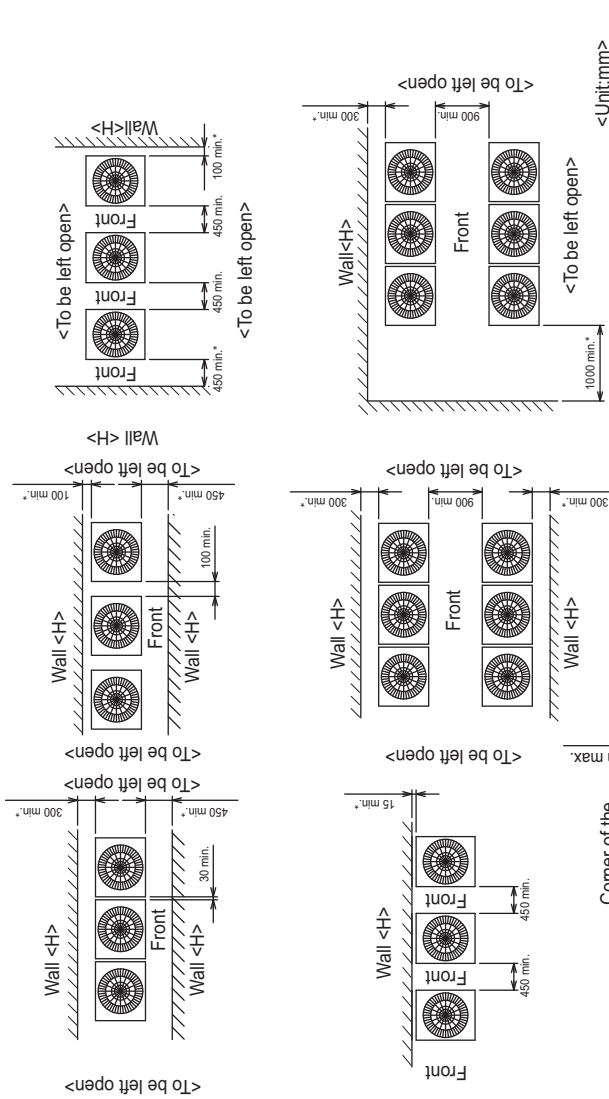


1.Required space around the unit

● In case of single installation

- ① Secure enough space around the unit as shown in the figure below.
 - With a space of at least 300mm to the wall on the back of the unit

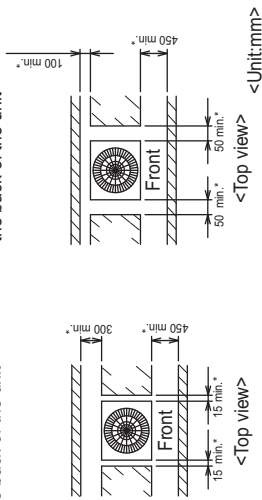

- ② When the height of the walls on the front,back or on the sides<H> exceeds the wall height limit as defined below add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.

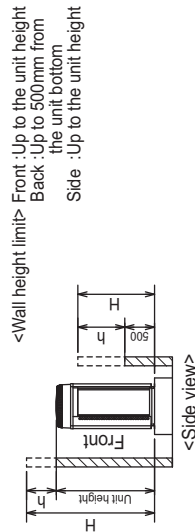

2.Foundation work

- ① Take into consideration the surface strength, water drainage route, piping route, and wiring route when preparing the installation site.
 - <Note that the drain water comes out of the unit during operation.>
- ② Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure (Fig.A,B)
 - When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- ③ The protrusion length of the anchor bolt must not exceed 30mm.(Fig.A,B)
- ④ Use four fixing plates as shown in the right figure <field supply required> when using post-installed anchor bolts.(Fig.C,D)
- ⑤ To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates <field supply required>.
- ⑥ When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- ⑦ Refer to the Installation Manual when installing units on an installation base.

PUHY-EP250YJM-A(-BS)

Unit : mm

Y (HIGH COP)

● In case of collective installation

- ① When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of units as shown in the figures below.
- ② At least two sides must be left open.
- ③ As with the single installation, add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.
- ④ If there is a wall at both the front and the rear of the unit, install up to six units consecutively in the side direction and provide a space of 1000mm or more as inlet space/ passage space for each six units.

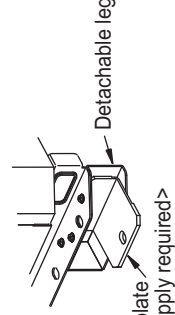
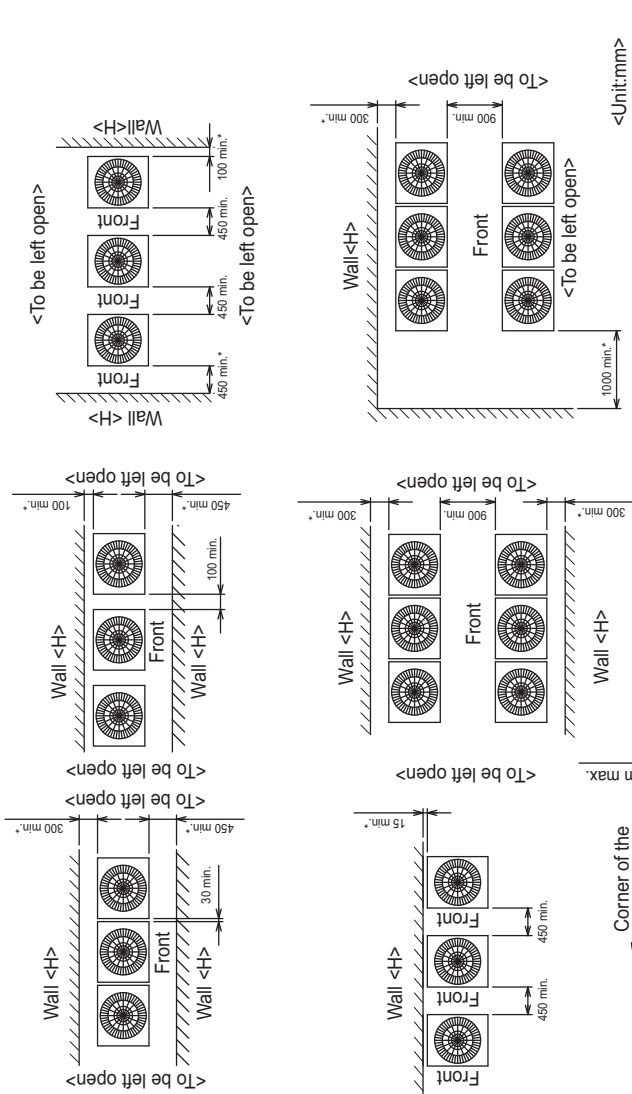


Fig. D (with detachable legs)

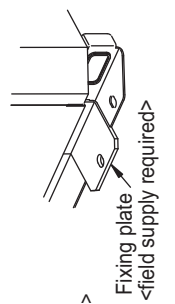


Fig. C (without detachable legs)

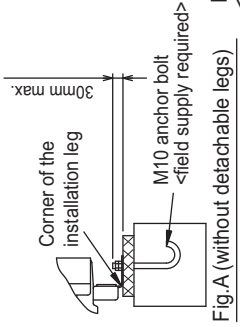


Fig. A (without detachable legs)


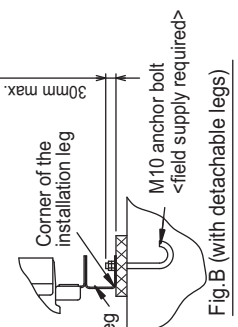


Fig. B (with detachable legs)


1. Required space around the unit

● In case of single installation

- ① Secure enough space around the unit as shown in the figure below.
- With a space of at least 300mm to the wall on the back of the unit

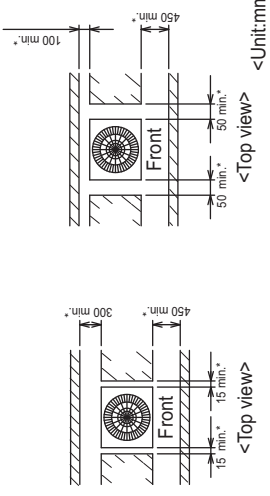

- ② When the height of the walls on the front, back or on the sides <H> exceeds the wall height limit as defined below add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.

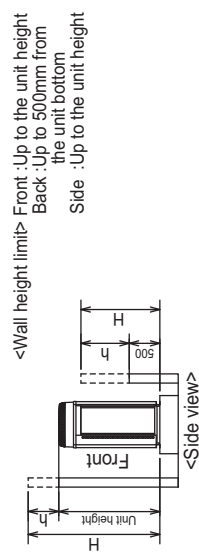


2. Foundation work

- ① Take into consideration the surface strength, water drainage route, piping route, and wiring route when preparing the installation site.
- <Note that the drain water comes out of the unit during operation.>
- ② Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure.(Fig.A,B)
When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- ③ The protrusion length of the anchor bolt must not exceed 30mm.(Fig.A,B)
- ④ Use four fixing plates as shown in the right figure <field supply required> when using post-installed anchor bolts.(Fig.C,D)
- ⑤ To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates <field supply required>
- ⑥ When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- ⑦ Refer to the Installation Manual when installing units on an installation base.

PUHY-EP300YJM-A(-BS)

Unit : mm

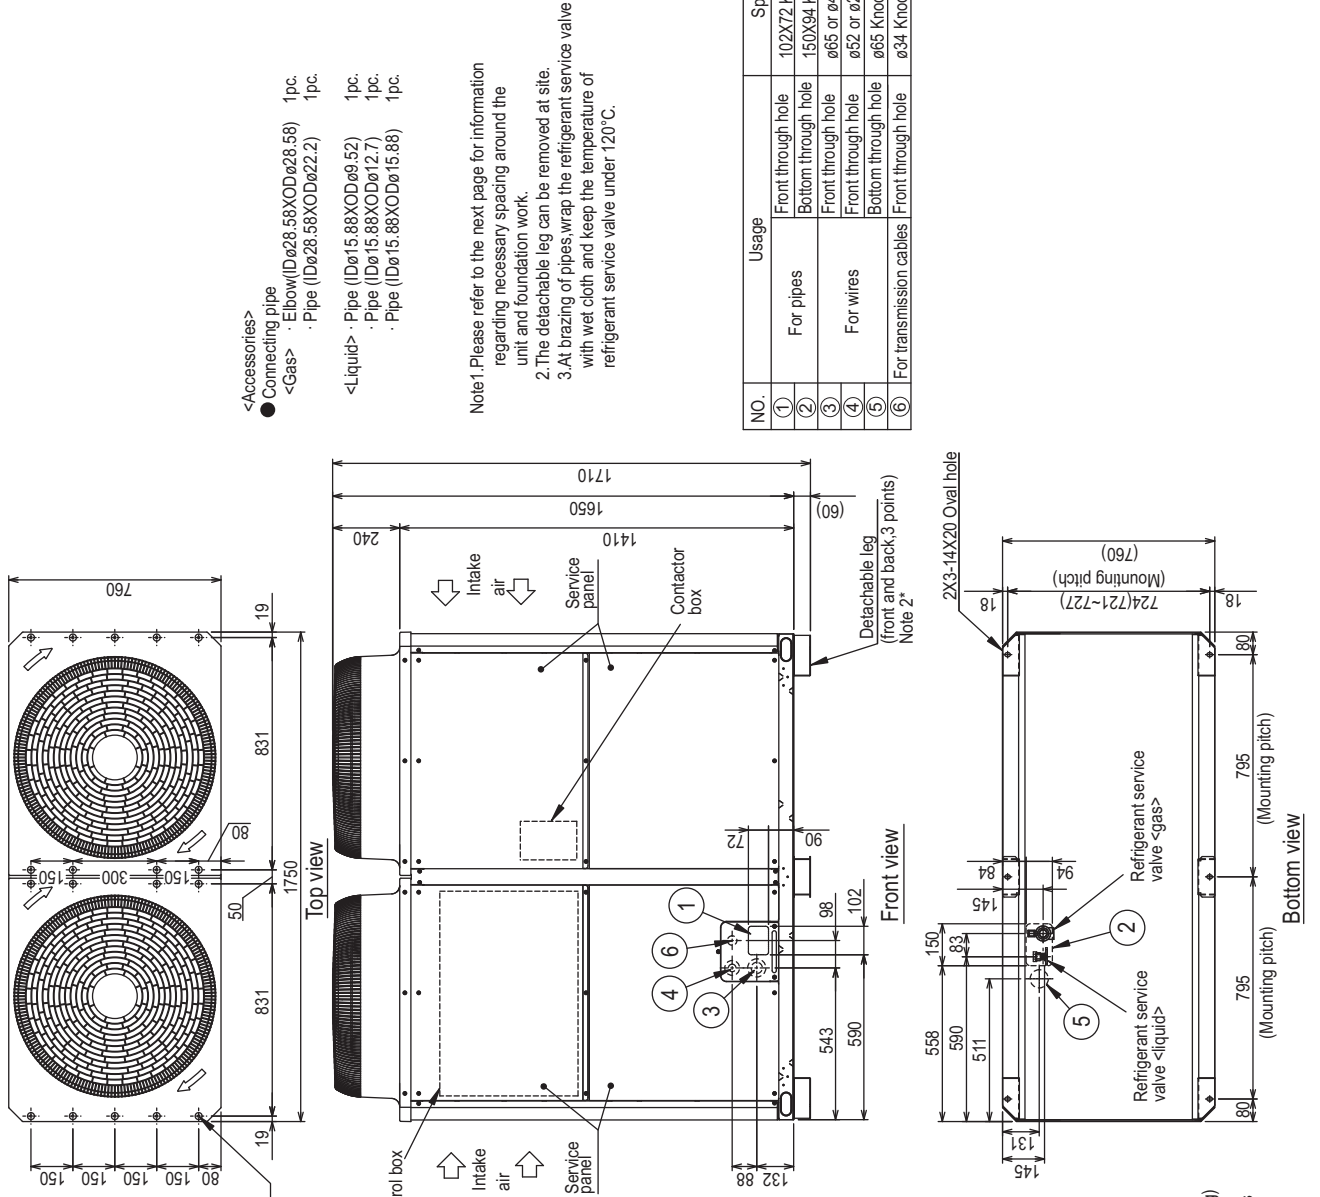

- <Accessories>
 ● Connecting pipe
 ● Elbow (IDø28.58XODø28.58) 1pc.
 ● Gas> Pipe (IDø28.58XODø22.2) 1pc.
 ● Liquid> Pipe (IDø15.88XODø9.52) 1pc.
 ● Pipe (IDø15.88XODø12.7) 1pc.
 ● Pipe (IDø15.88XODø15.88) 1pc.

Note 1>Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
 2.The detachable leg can be removed at site.
 3.At brazing of pipes,wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.

NO.	Usage	Specifications
①	Front through hole	102X72 Knockout hole
②	Bottom through hole	150X94 Knockout hole
③	Front through hole	ø65 or ø40 Knockout hole
④	Front through hole	ø52 or ø27 Knockout hole
⑤	Bottom through hole	ø65 Knockout hole
⑥	Front through hole	ø34 Knockout hole

Model	Position dimensions for the refrigerant service valve		Connection specifications for the refrigerant service valve*1	
	Liquid	Gas	Liquid	Gas
PUHY-EP300YJM	158	172	ø9.52 Braze (ø12.7 Braze) *2,*3	ø22.2 Braze

*1 Connect by using the connecting pipes (for bottom piping and front piping) that are supplied.
 *2 Indicates dimensions and connection specifications in the case the unit is used in combination with other outdoor units.
 *3 Total length ≥ 40m

Y HIGH COP






PUHY-EP300YJM-A(-BS)

Unit : mm

Y (HIGH COP)

● In case of collective installation


- ① When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of units as shown in the figures below.
- ② At least two sides must be left open.
- ③ As with the single installation, add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.
- ④ If there is a wall at both the front and the rear of the unit, install up to three units consecutively in the side direction and provide a space of 1000mm or more as inlet space/passage space for each three units.

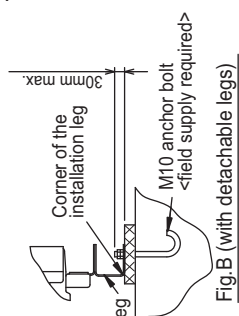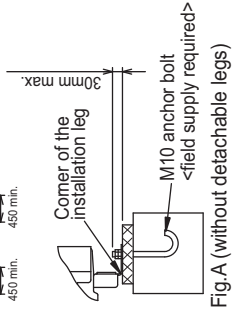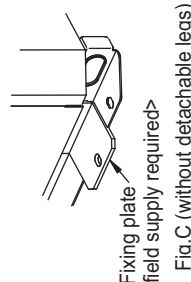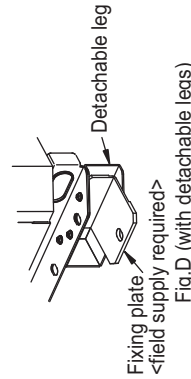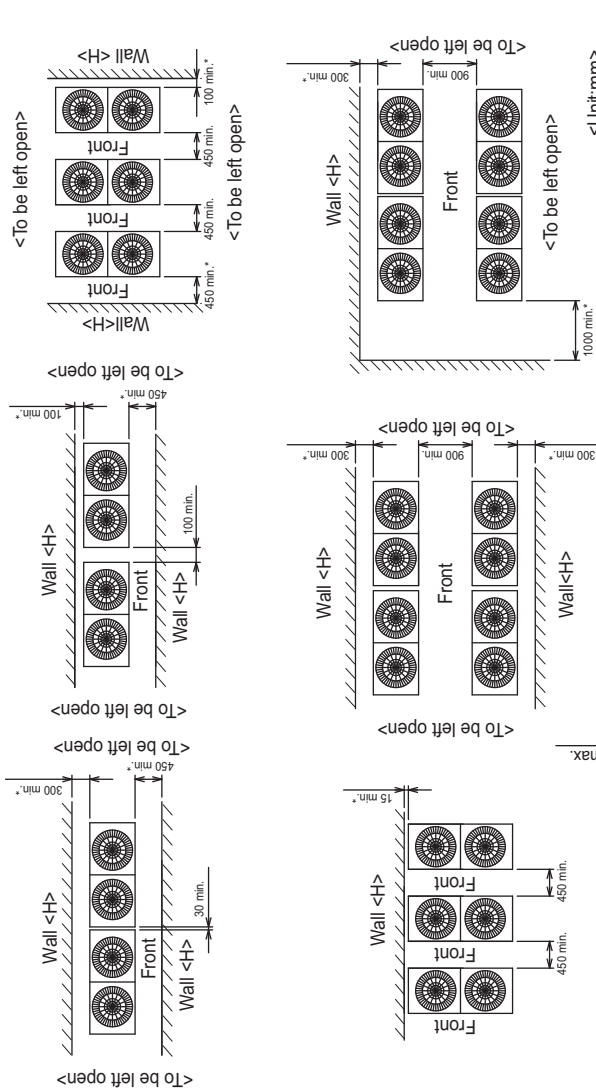


1. Required space around the unit

● In case of single installation

- ① Secure enough space around the unit as shown in the figure below.
 - With a space of at least 300mm to the wall on the back of the unit

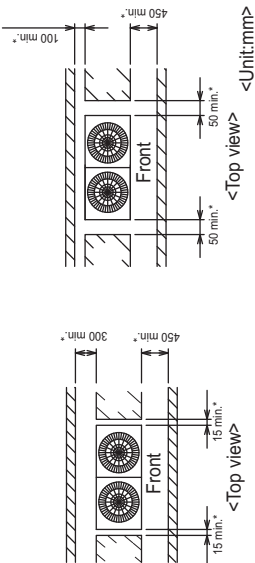


- ② When the height of the walls on the front, back or on the sides <H> exceeds the wall height limit as defined below add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.

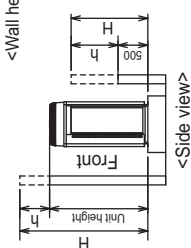

2. Foundation work


- ① Take into consideration the surface strength, water drainage route, piping route and wiring route when preparing the installation site.
 - <Note that the drain water comes out of the unit during operation.>
- ② Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure. (Fig.A,B)
 - When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- ③ The protrusion length of the anchor bolt must not exceed 30mm. (Fig.A,B)
- ④ Use four fixing plates as shown in the right figure. <field supply required> when using post-installed anchor bolts. (Fig.C,D)
- ⑤ To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates. <field supply required>
- ⑥ When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- ⑦ Refer to the Installation Manual when installing units on an installation base.

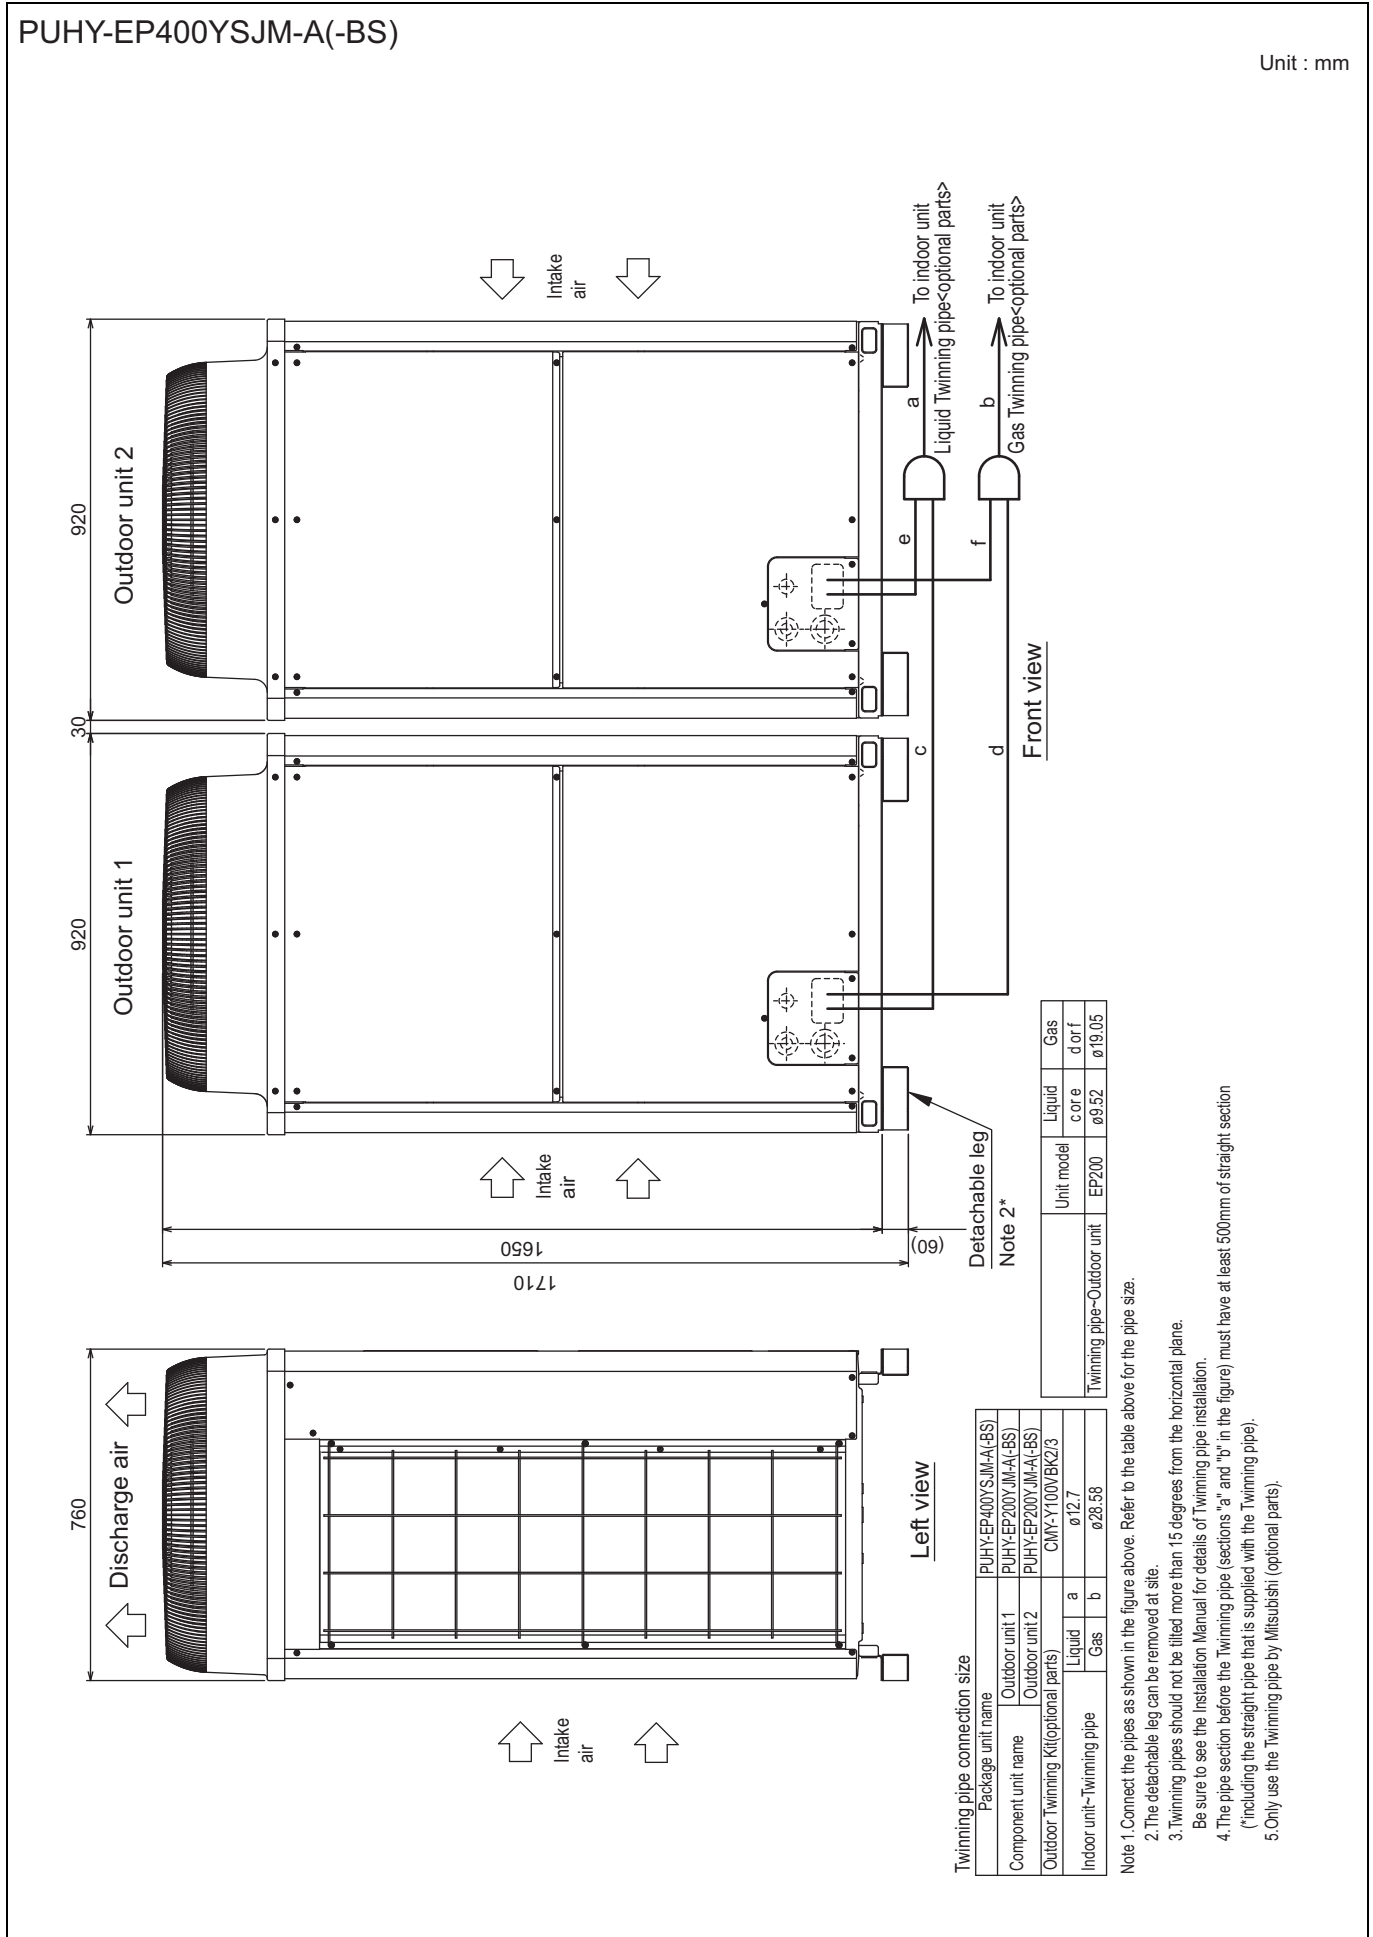


PUHY-EP450YSJM-A(-BS)

Unit : mm

Y (HIGH COP)

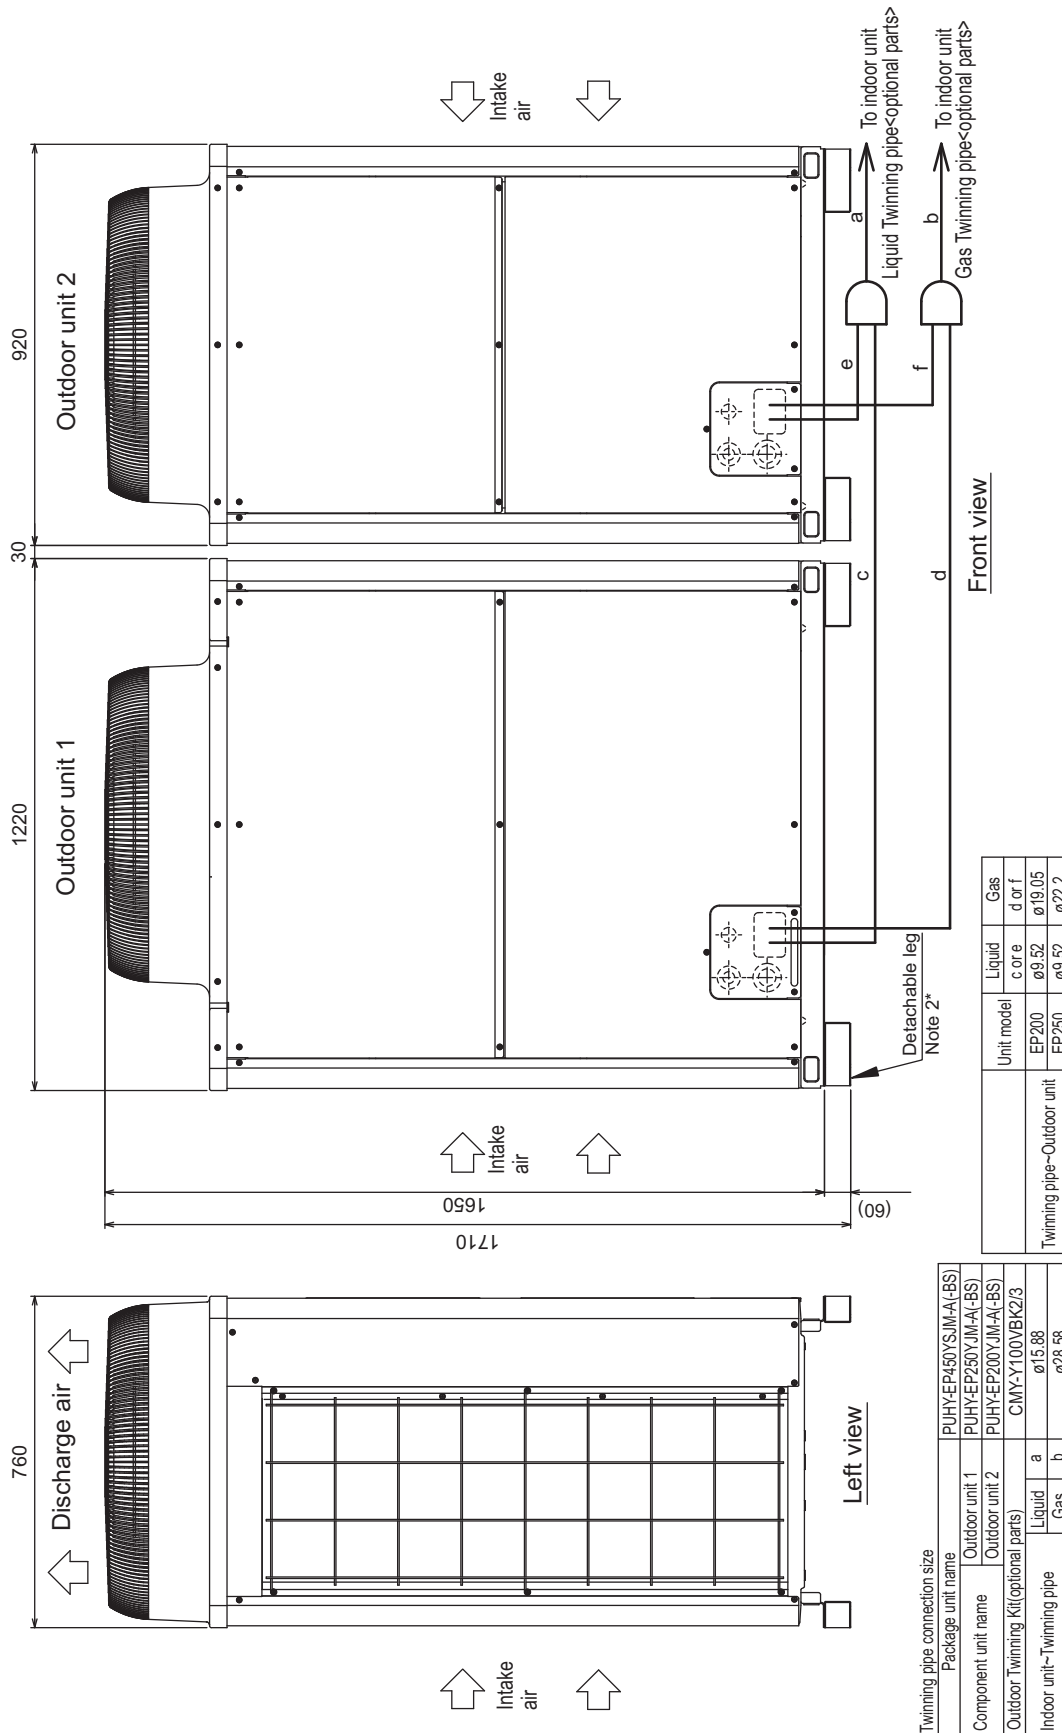


- Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.
 2. The detachable leg can be removed at site.
 3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.
 Be sure to see the Installation Manual for details of Twinning pipe installation.
 4. The pipe section before the Twinning pipe (sections "a" and "b" in the figure) must have at least 500mm of straight section (*including the straight pipe that is supplied with the Twinning pipe).
 5. Only use the Twinning pipe by Mitsubishi (optional parts).

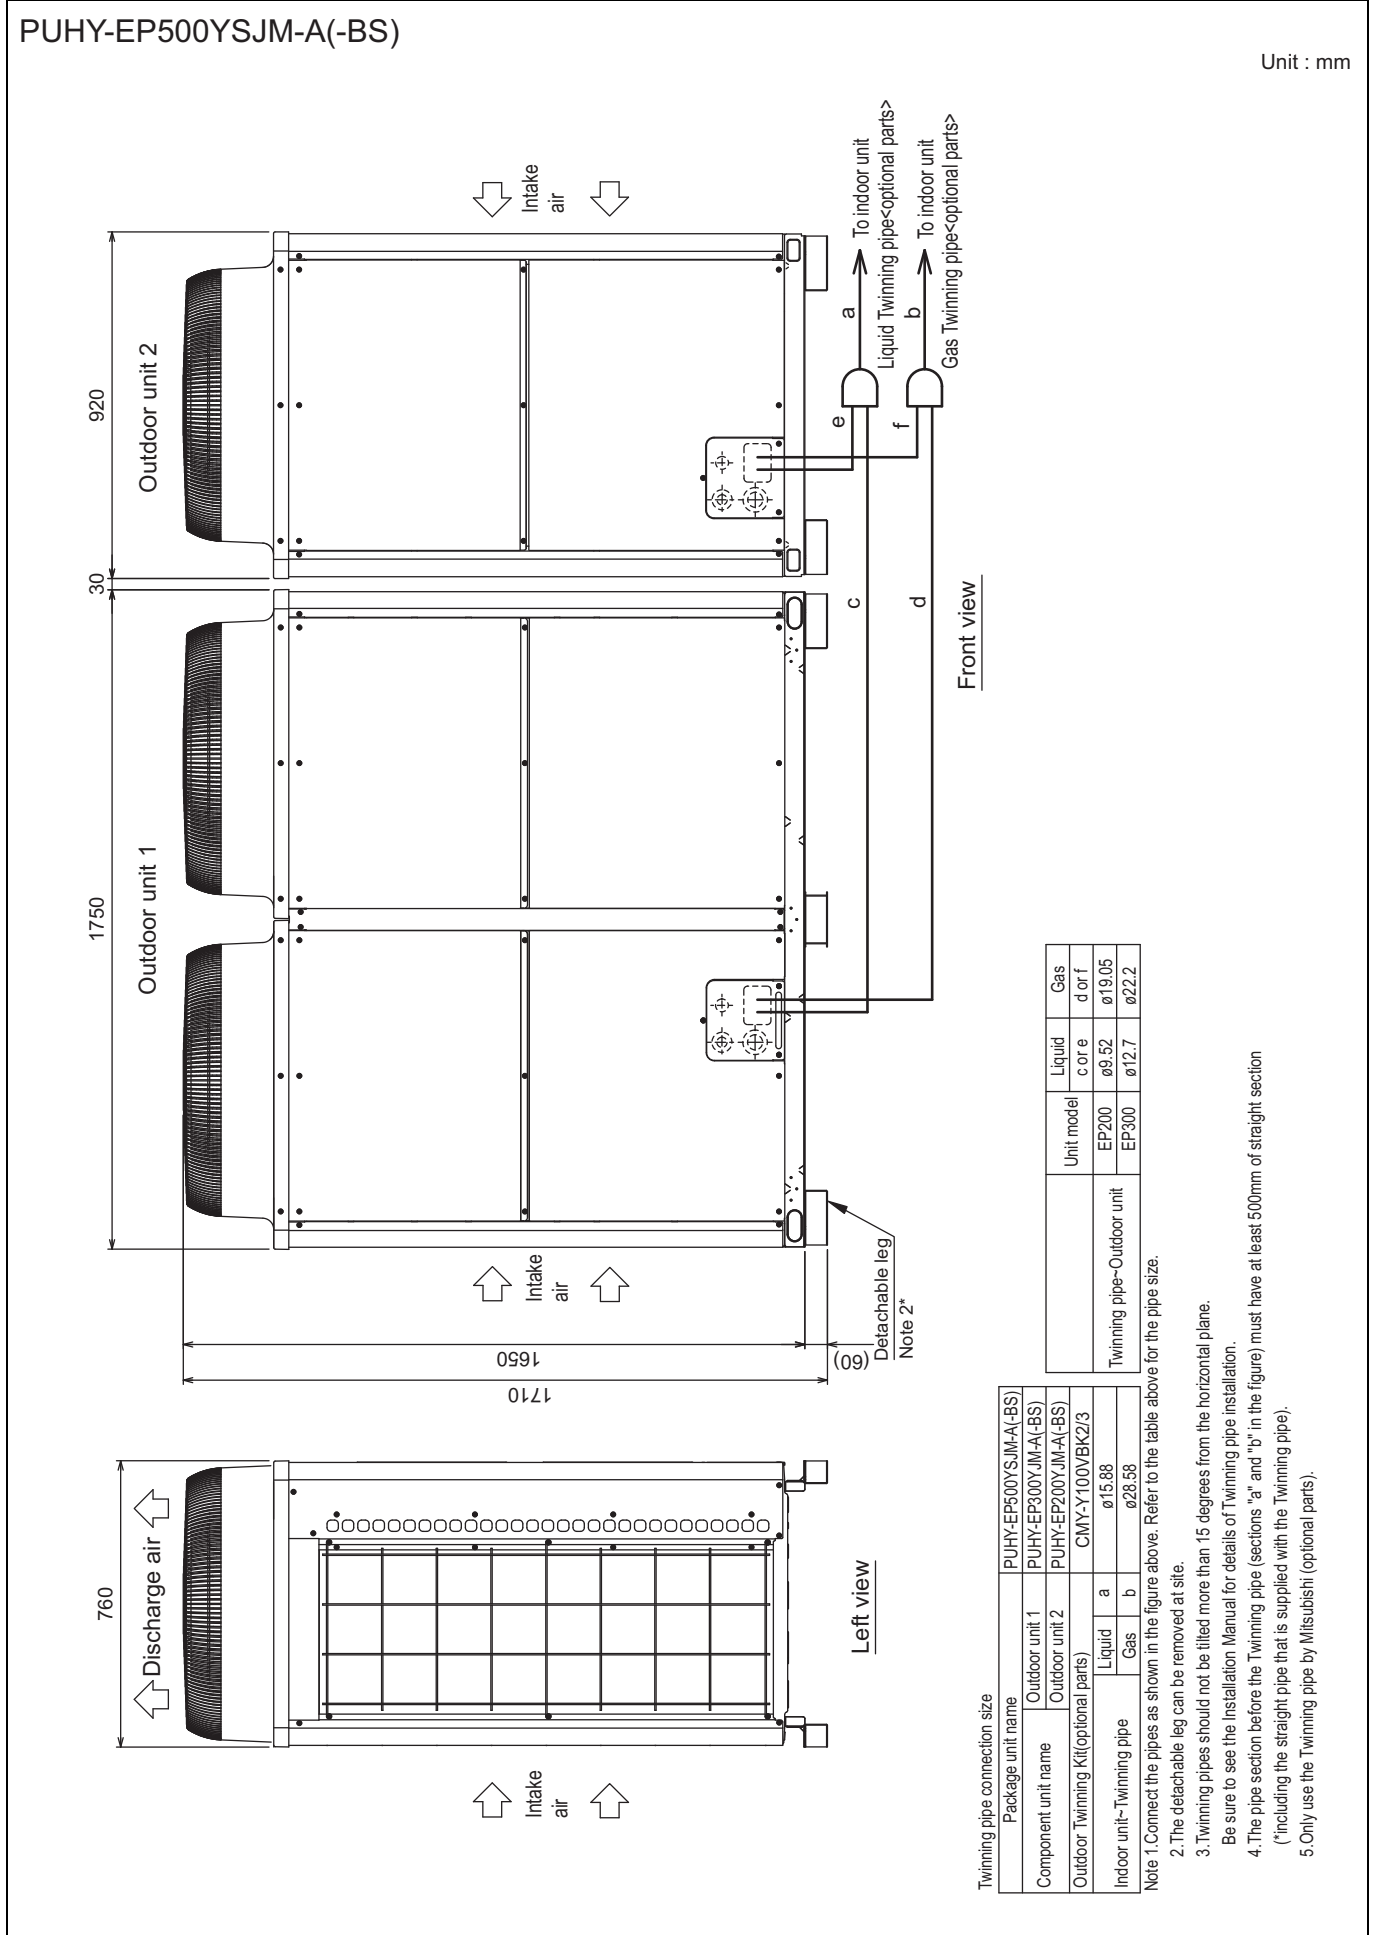

PUHY-EP500YSJM-A1(-BS)

Unit : mm

Y (HIGH COP)

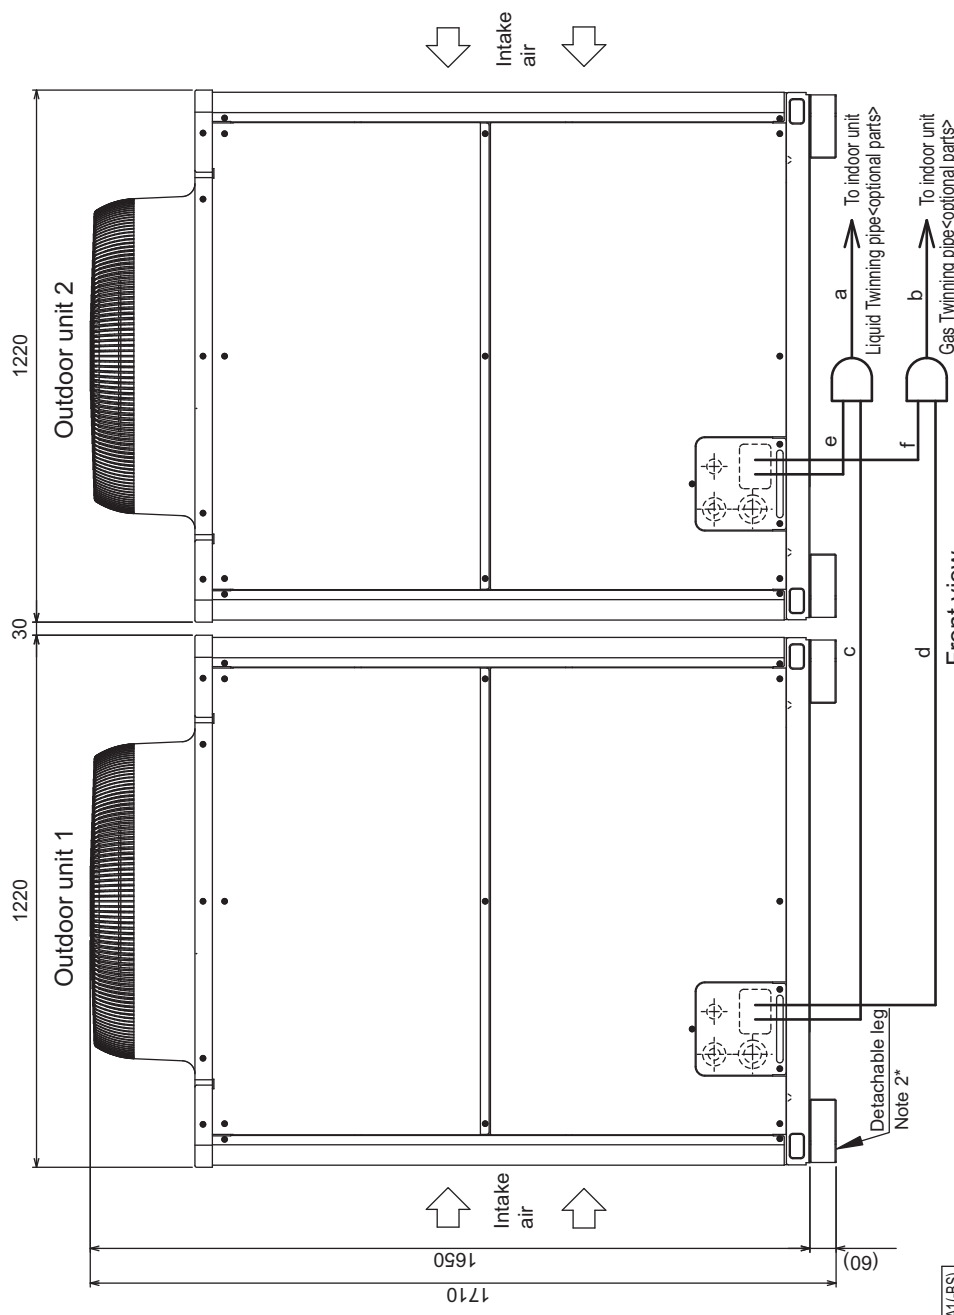


Twinning pipe connection size

Package unit name	PUHY-EP500YSJM-A1(-BS)	
Component unit name	Outdoor unit 1 PUHY-EP250YJM-A(-BS) Outdoor unit 2 PUHY-EP250YJM-A(-BS)	
Outdoor Twinning Kit(optional parts)	CMY-Y100VBK2/3	
Indoor unit-Twinning pipe	Liquid a	ø15.88
	Gas b	ø28.58

Twinning pipe-Outdoor unit	EP250	Unit model	Gas
		c or e	d or f
		ø9.52	ø22.2


- Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.
 2. The detachable leg can be removed at site.
 3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.
 Be sure to see the Installation Manual for details of Twinning pipe installation.
 4. The pipe section before the Twinning pipe (sections "a" and "b" in the figure) must have at least 500mm of straight section (*including the straight pipe that is supplied with the Twinning pipe).
 5. Only use the Twinning pipe by Mitsubishi (optional parts).

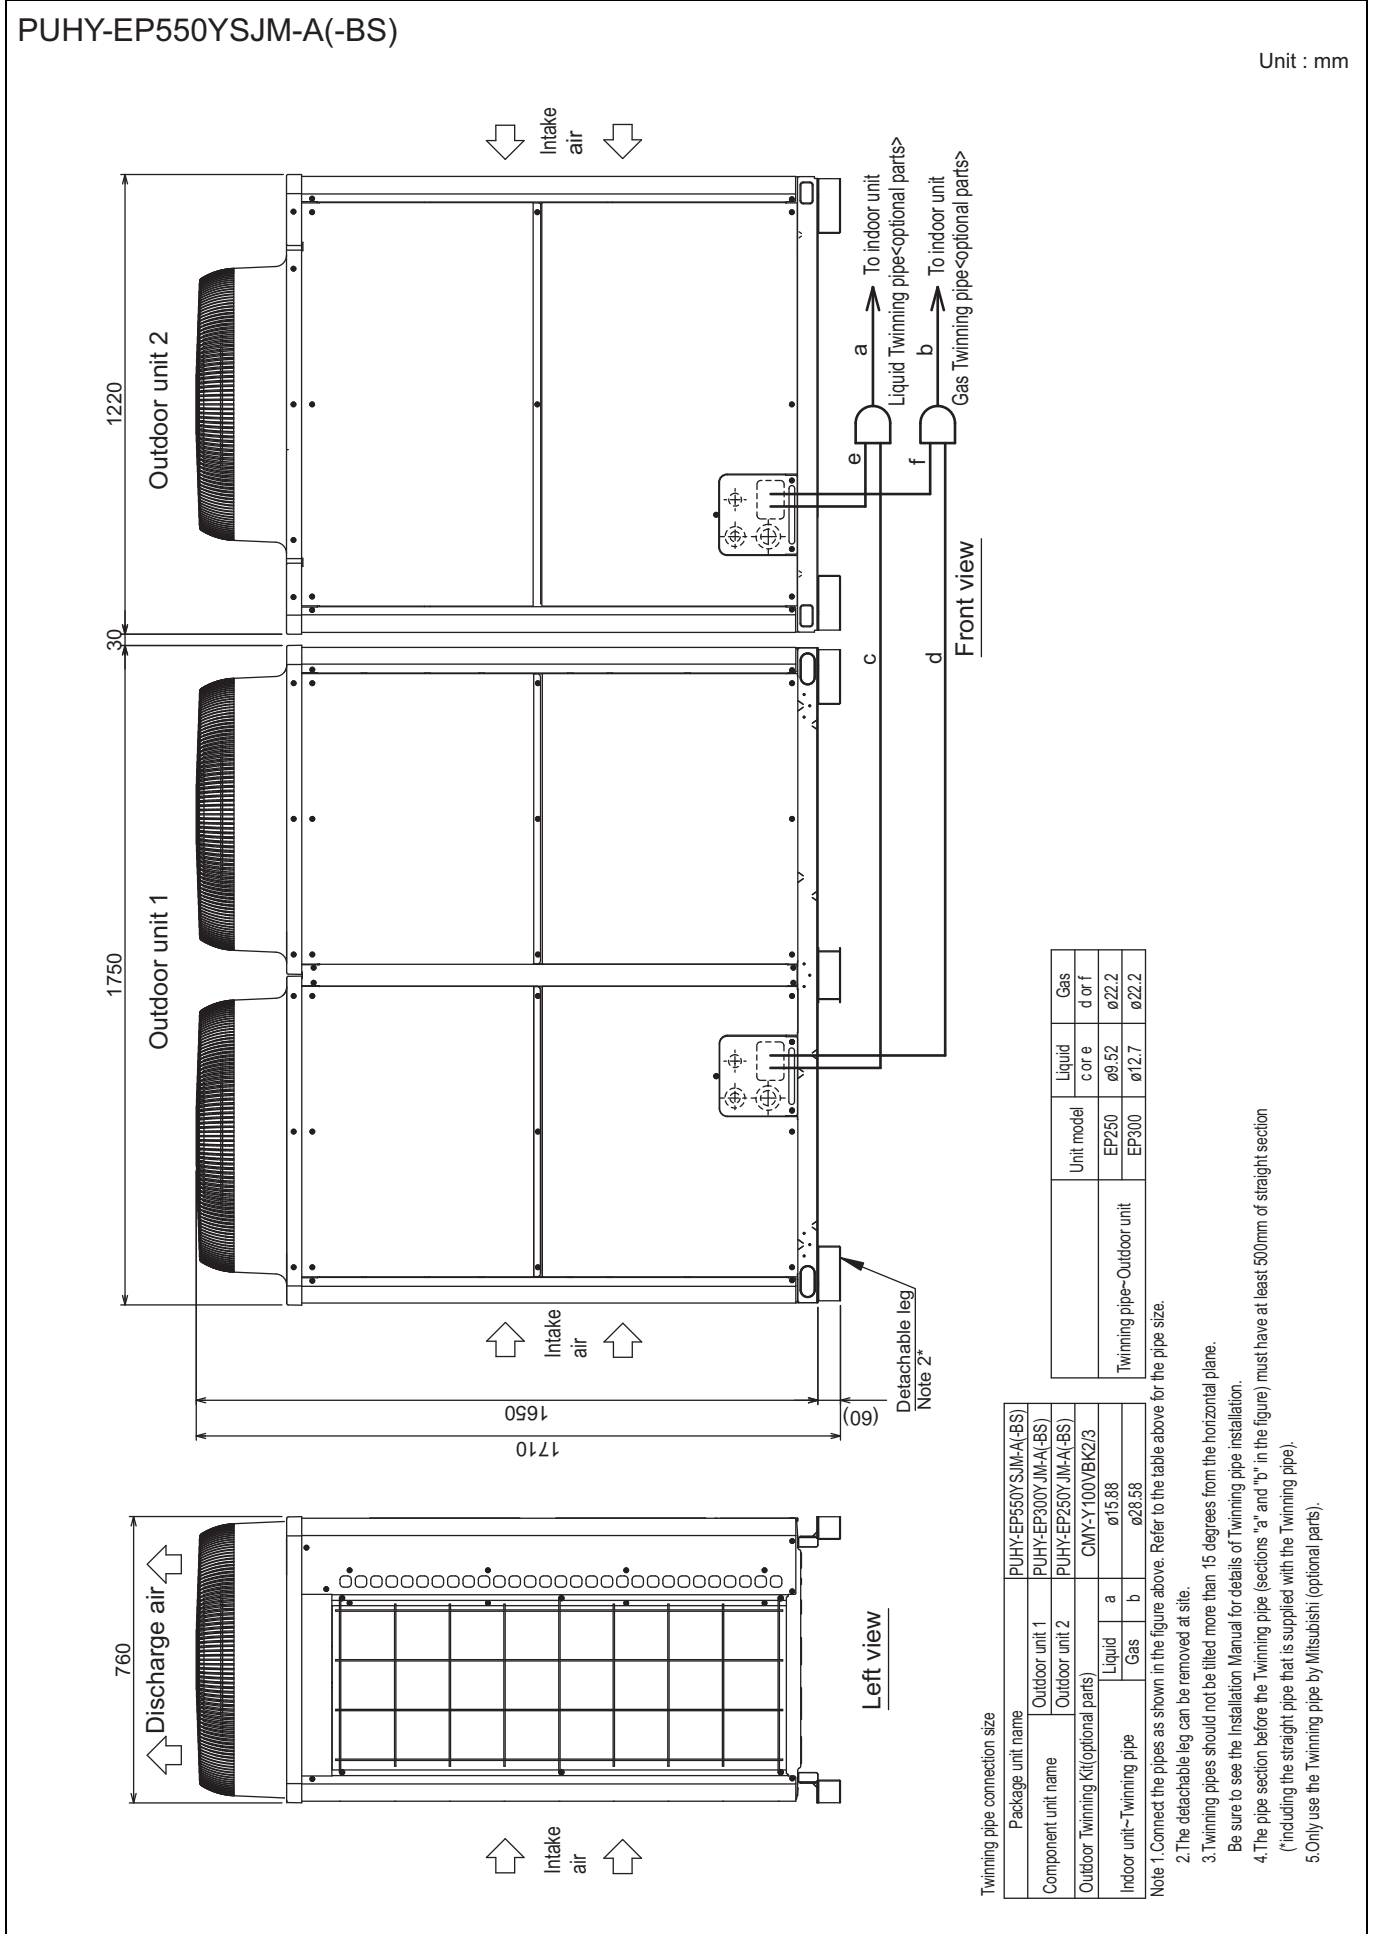

Y (HIGH COP)

PUHY-EP600YSJM-A(-BS)

Unit : mm

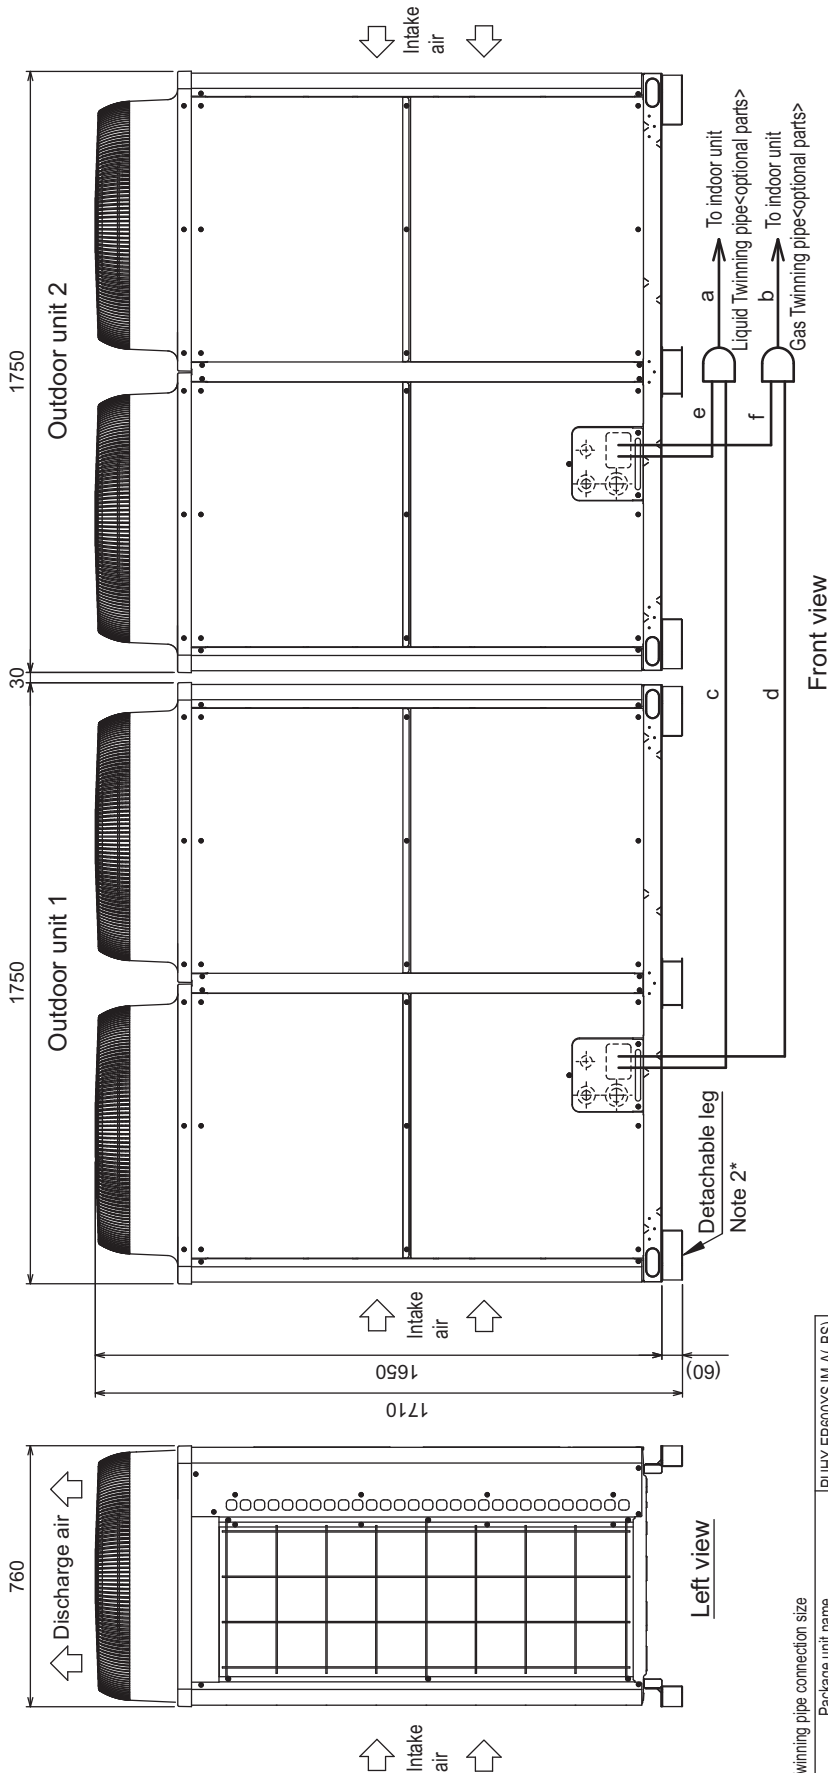

Twinning pipe connection size

Package unit name	PUHY-EP600YSJM-A(-BS)	
Component unit name	Outdoor unit 1	PUHY-EP300YJM-A(-BS)
	Outdoor unit 2	PUHY-EP300YJM-A(-BS)
Outdoor Twinning Kit(optional parts)	CMY-Y100V/BK2/3	
Indoor unit~ Twinning pipe	Liquid	a
	Gas	b
		ø15.88
		ø28.58

Twinning pipe-Outdoor unit	Unit model	Liquid core	Gas
	EP300	ø12.7	d or f ø22.2

Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.

2. The detachable leg can be removed at site.

3. Twinning pipes should not be filled more than 15 degrees from the horizontal plane.


Be sure to see the Installation Manual for details of Twinning pipe installation.

4. The pipe section before the Twinning pipe (sections "a" and "b" in the figure) must have at least 500mm of straight section

(*including the straight pipe that is supplied with the Twinning pipe).

5. Only use the Twinning pipe by Mitsubishi (optional parts).


Y (HIGH COP)

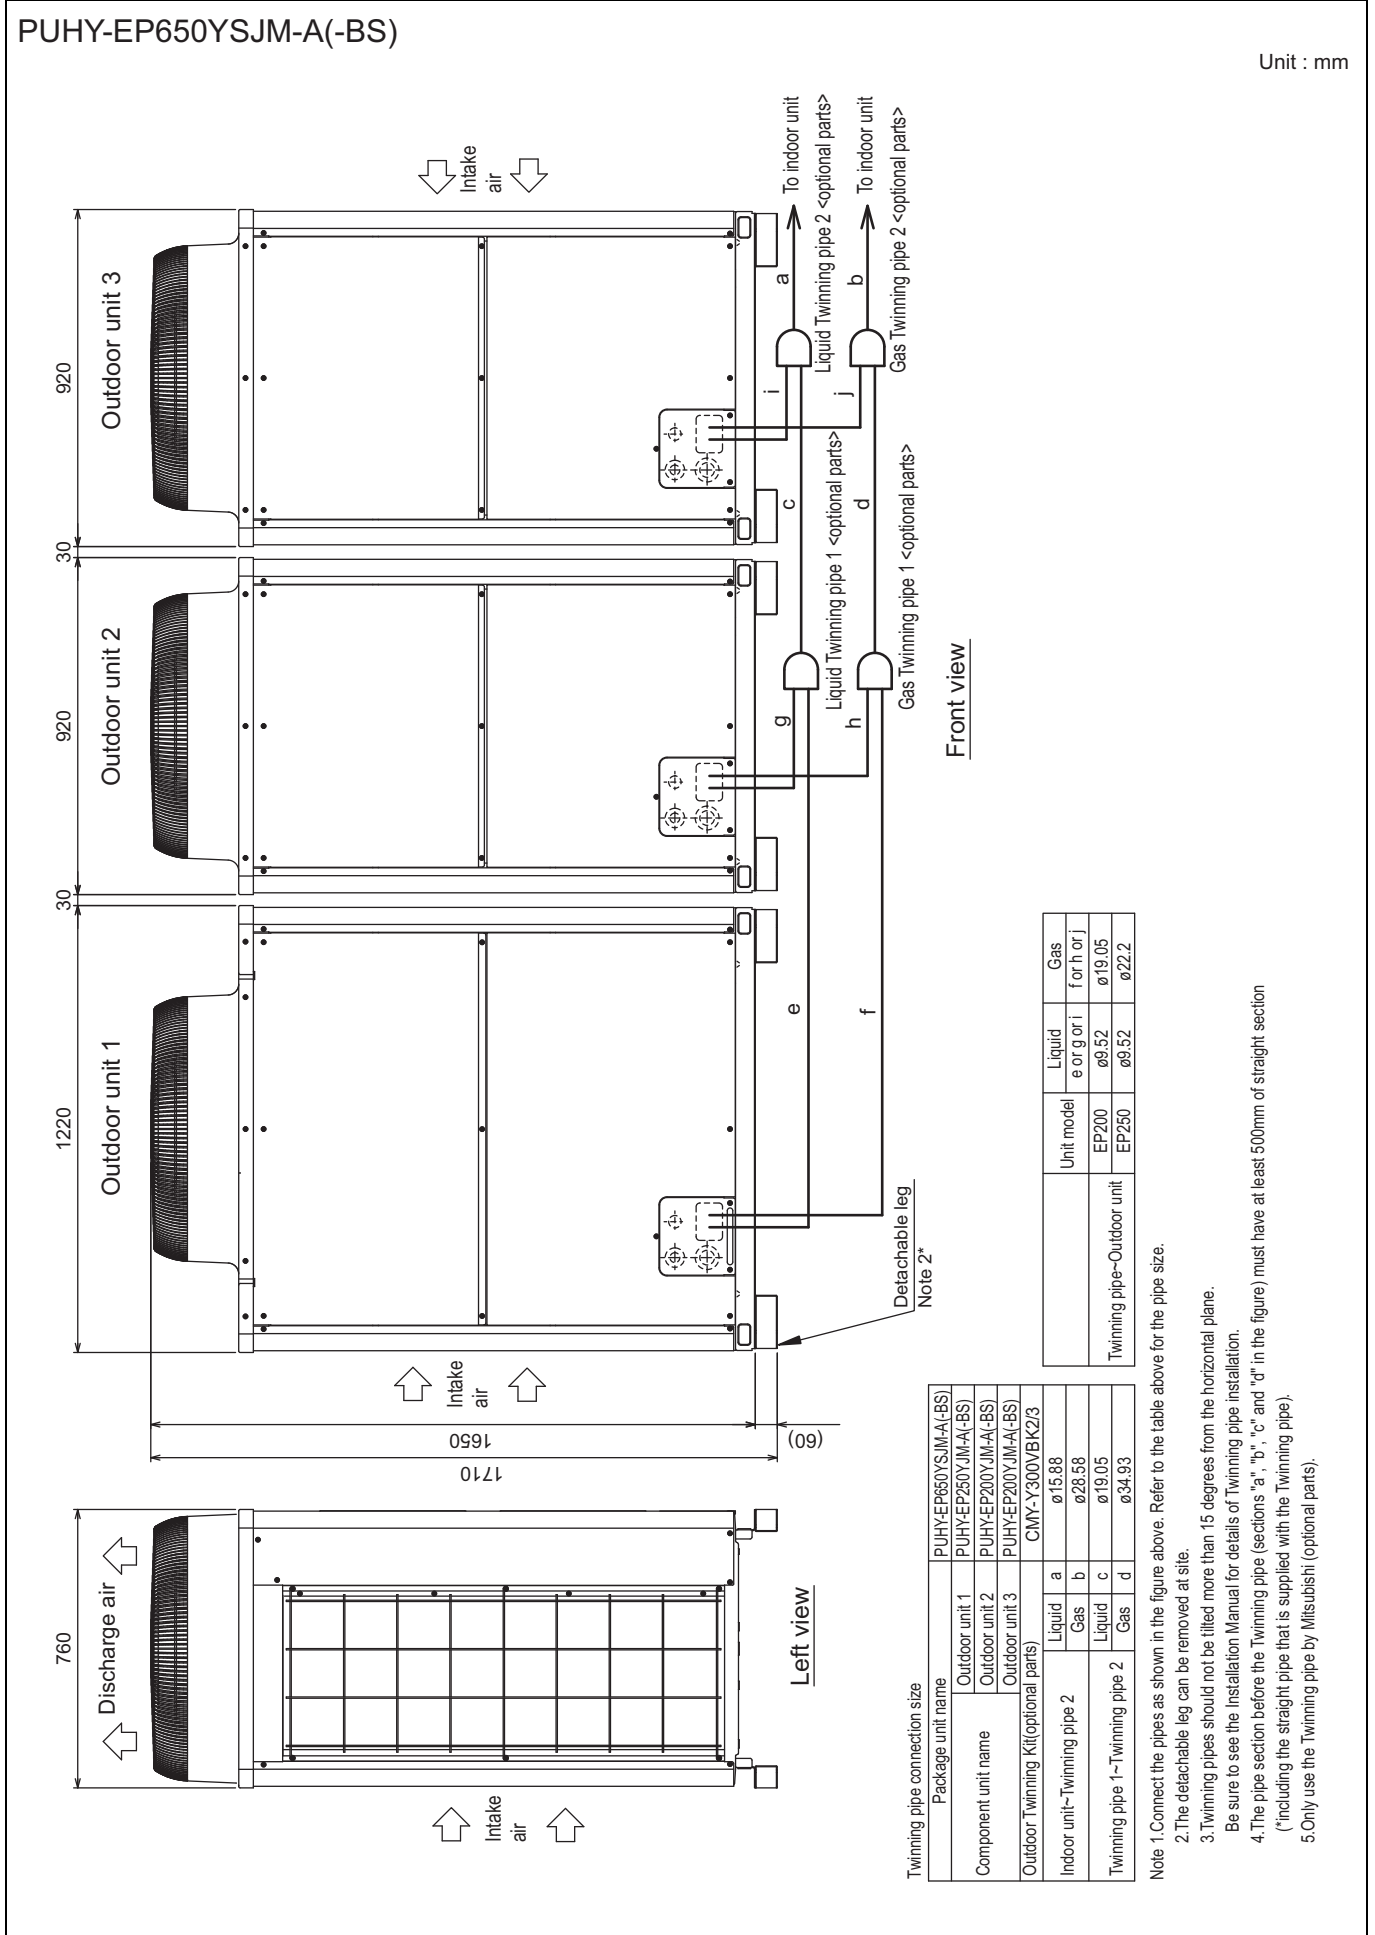

Y HIGH COP

PUHY-EP700YSJM-A(-BS)

Unit : mm

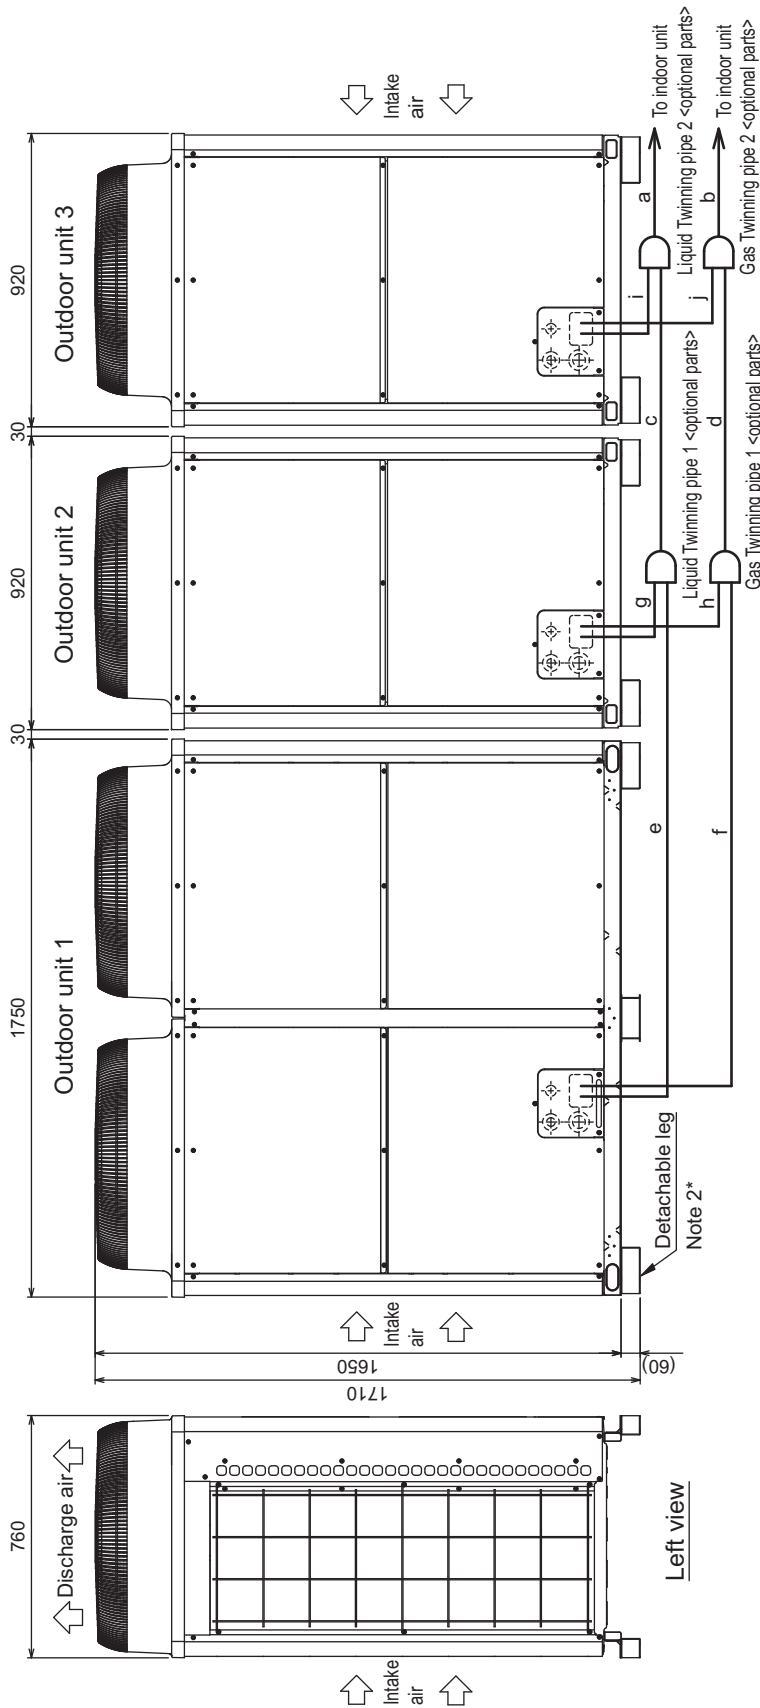

Front view

Left view


Twinning pipe connection size

Package unit name	PUHY-EP700YSJM-A(-BS)	
Outdoor unit 1	PUHY-EP300YJM-A(-BS)	
Outdoor unit 2	PUHY-EP200YJM-A(-BS)	
Outdoor unit 3	PUHY-EP200YJM-A(-BS)	
Outdoor Twinning Kit (optional parts)	CMY-Y300VBK2/3	
Indoor unit- Twinning pipe 2	Liquid a	ø19.05
	Gas b	ø34.93
Twinning pipe 1- Twinning pipe 2	Liquid c	ø19.05
	Gas d	ø34.93

Unit model	Liquid e or g or i	Gas f or h or j
EP200	ø9.52	ø19.05
EP300	ø12.7	ø22.2

- Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.
 2. The detachable leg can be removed at site.
 3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.
 Be sure to see the Installation Manual for details of Twinning pipe installation.
 4. The pipe section before the Twinning pipe (sections "a", "b", "c" and "d" in the figure) must have at least 500mm of straight section (*including the straight pipe that is supplied with the Twinning pipe).
 5. Only use the Twinning pipe by Mitsubishi (optional parts).


Y (HIGH COP)

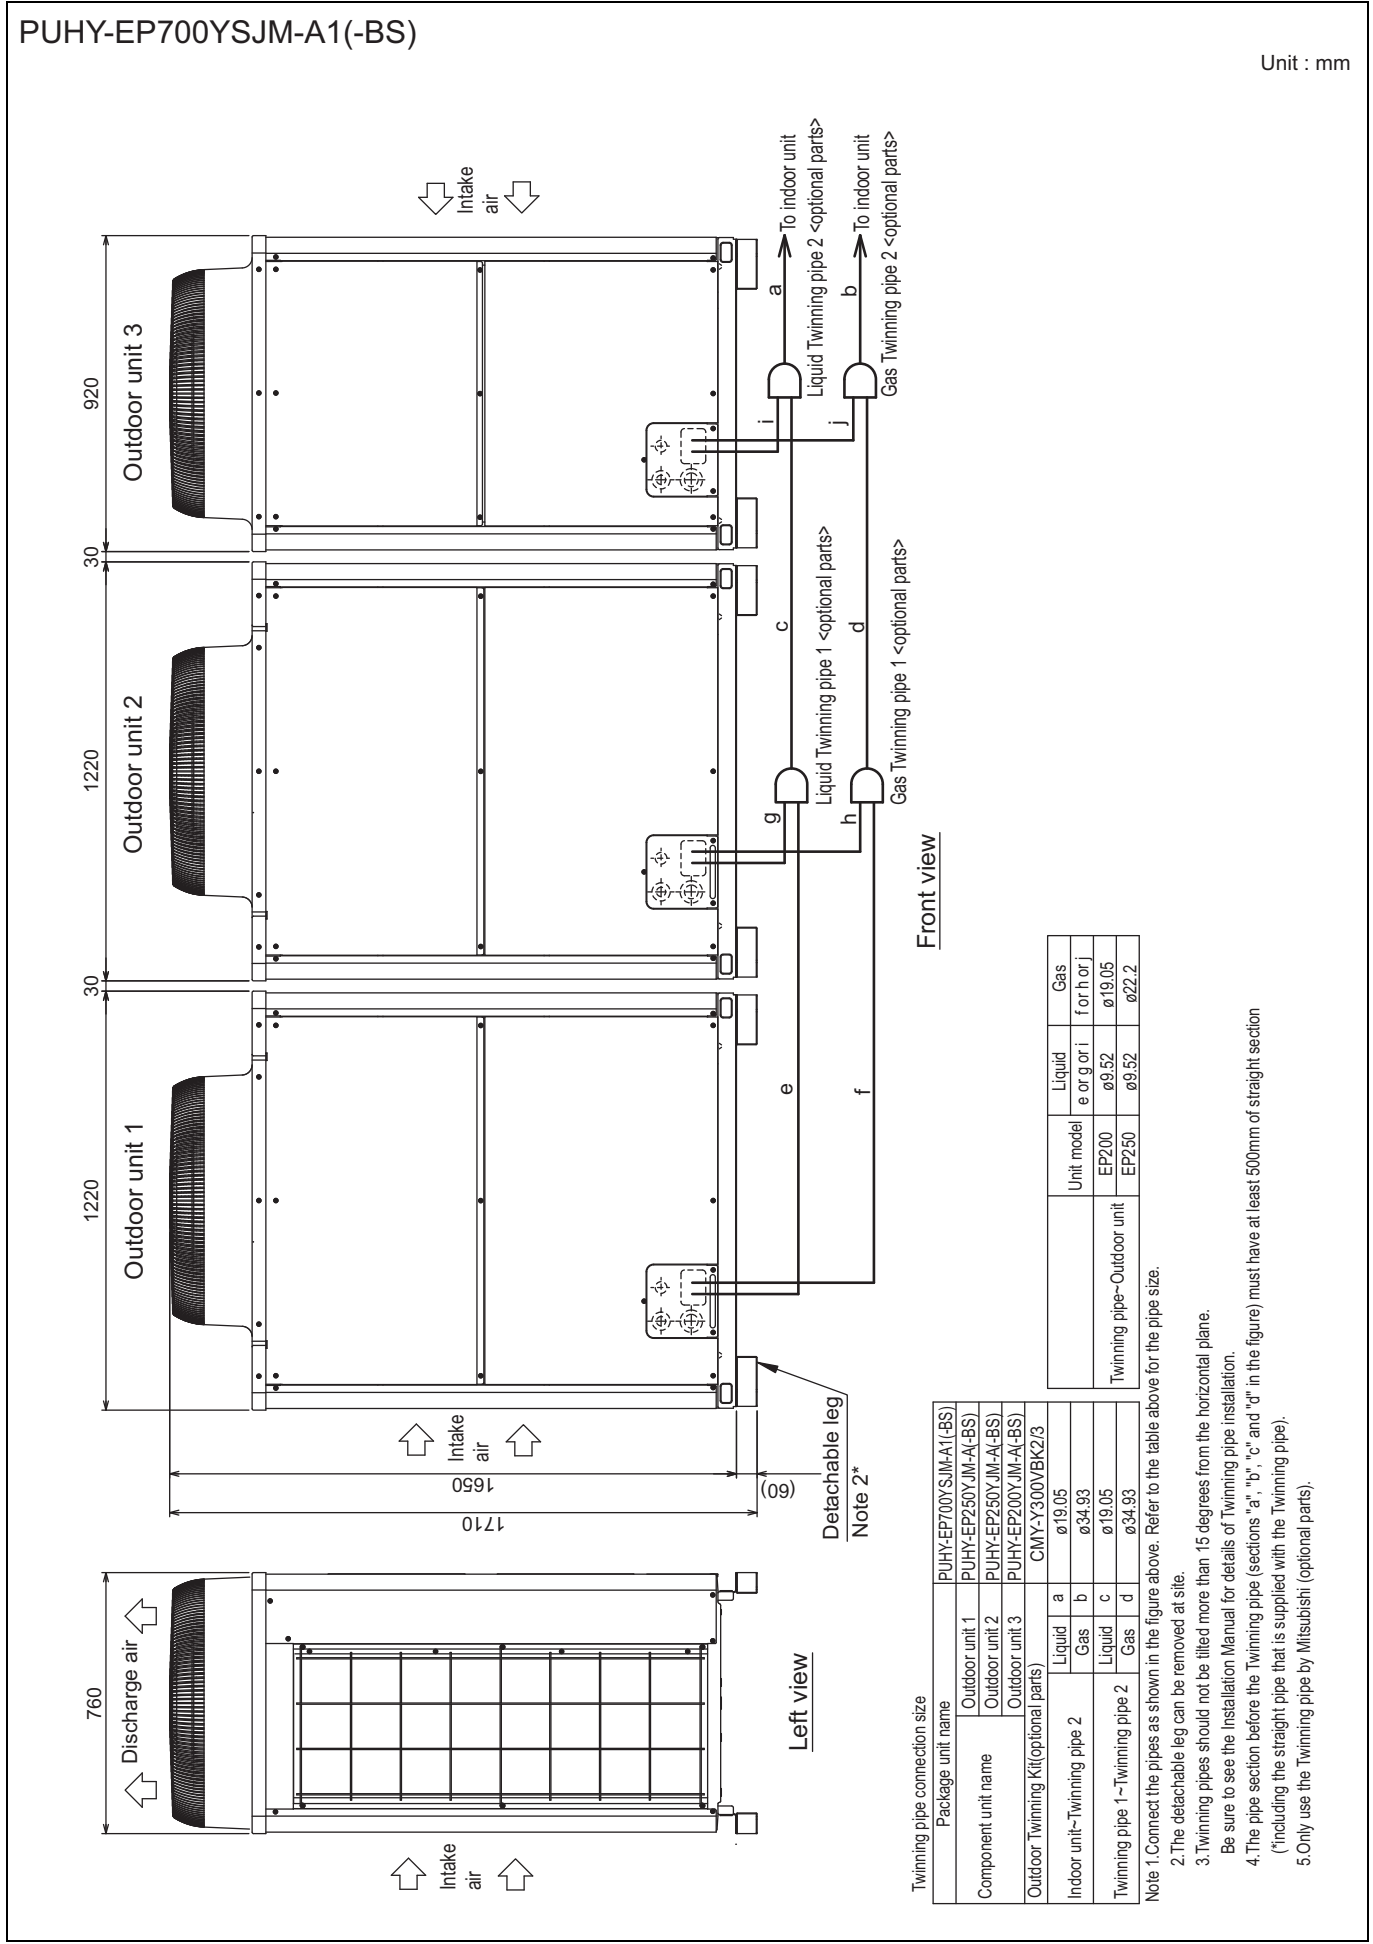

Y (HIGH COP)

PUHY-EP750YSJM-A(-BS)

Unit : mm

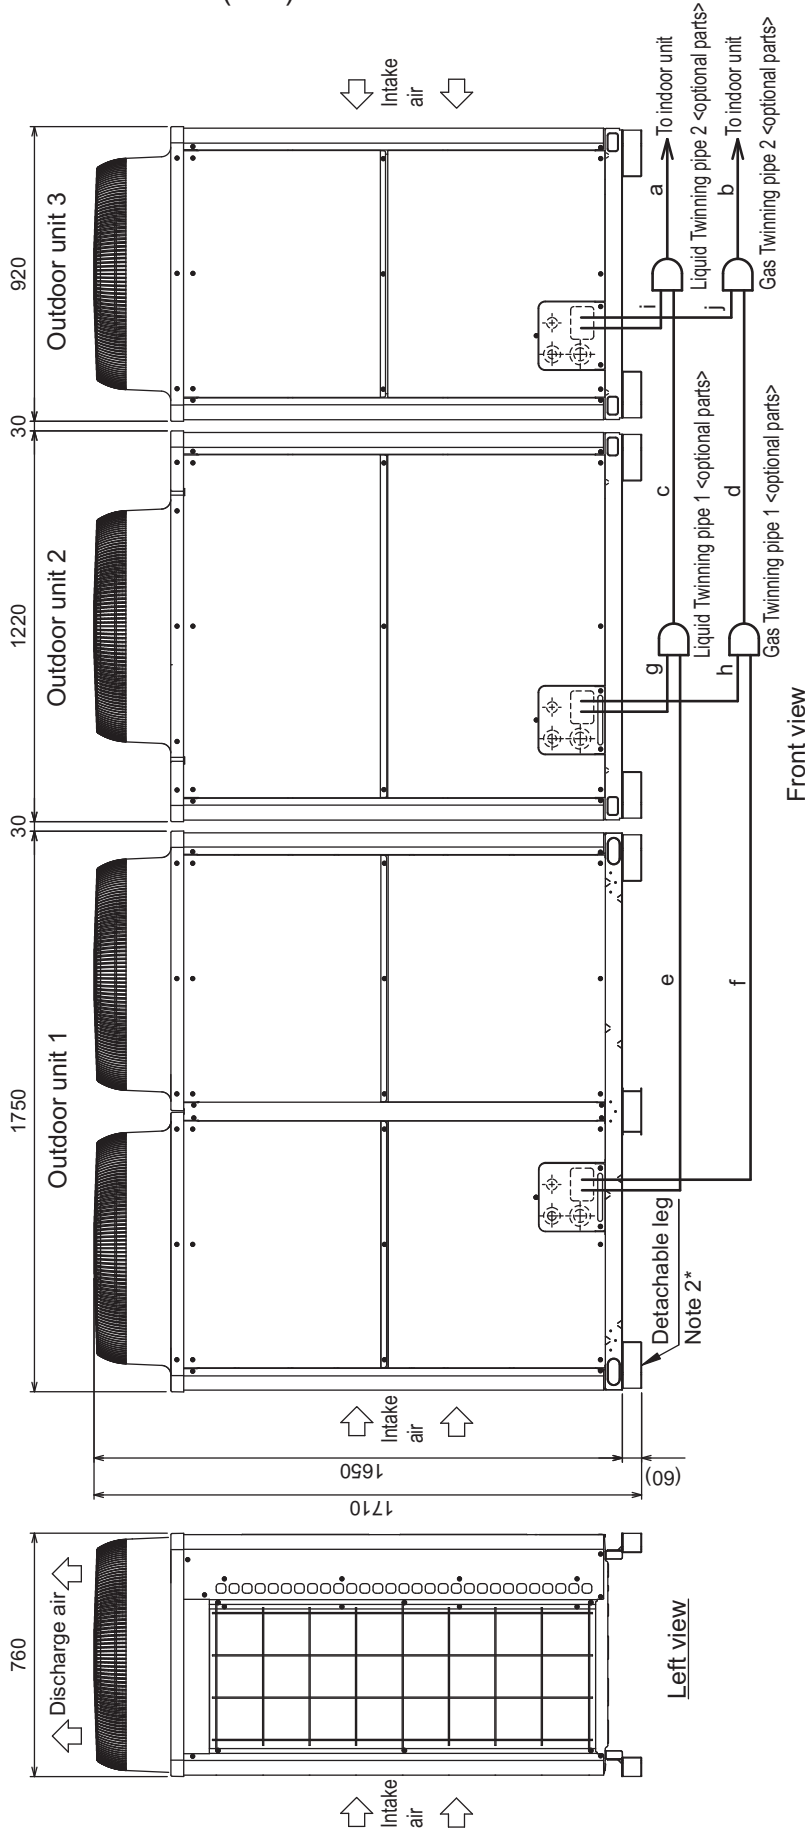

Twinning pipe connection size

Package unit name	PUHY-EP750YSJM-A(-BS)		
Outdoor unit 1	PUHY-EP300YJM-A(-BS)		
Outdoor unit 2	PUHY-EP250YJM-A(-BS)		
Outdoor unit 3	PUHY-EP200YJM-A(-BS)		
Outdoor Twinning Kit(optional parts)	CMY-Y300VBK2/3		
Indoor unit~Twinning pipe 2	Liquid	a	ø19.05
	Gas	b	ø34.93
Twinning pipe 1~Twinning pipe 2	Liquid	c	ø19.05
	Gas	d	ø34.93

Unit model	Liquid e or ori	Gas f or h or j
EP200	ø9.52	ø19.05
EP250	ø9.52	ø22.2
EP300	ø12.7	ø22.2

Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.

2. The detachable leg can be removed at site.

3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.


Be sure to see the Installation Manual for details of Twinning pipe installation.

4. The pipe section before the Twinning pipe (sections "a", "b", "c" and "d" in the figure) must have at least 500mm of straight section

(*including the straight pipe that is supplied with the Twinning pipe).

5. Only use the Twinning pipe by Mitsubishi (optional parts).


Y (HIGH COP)

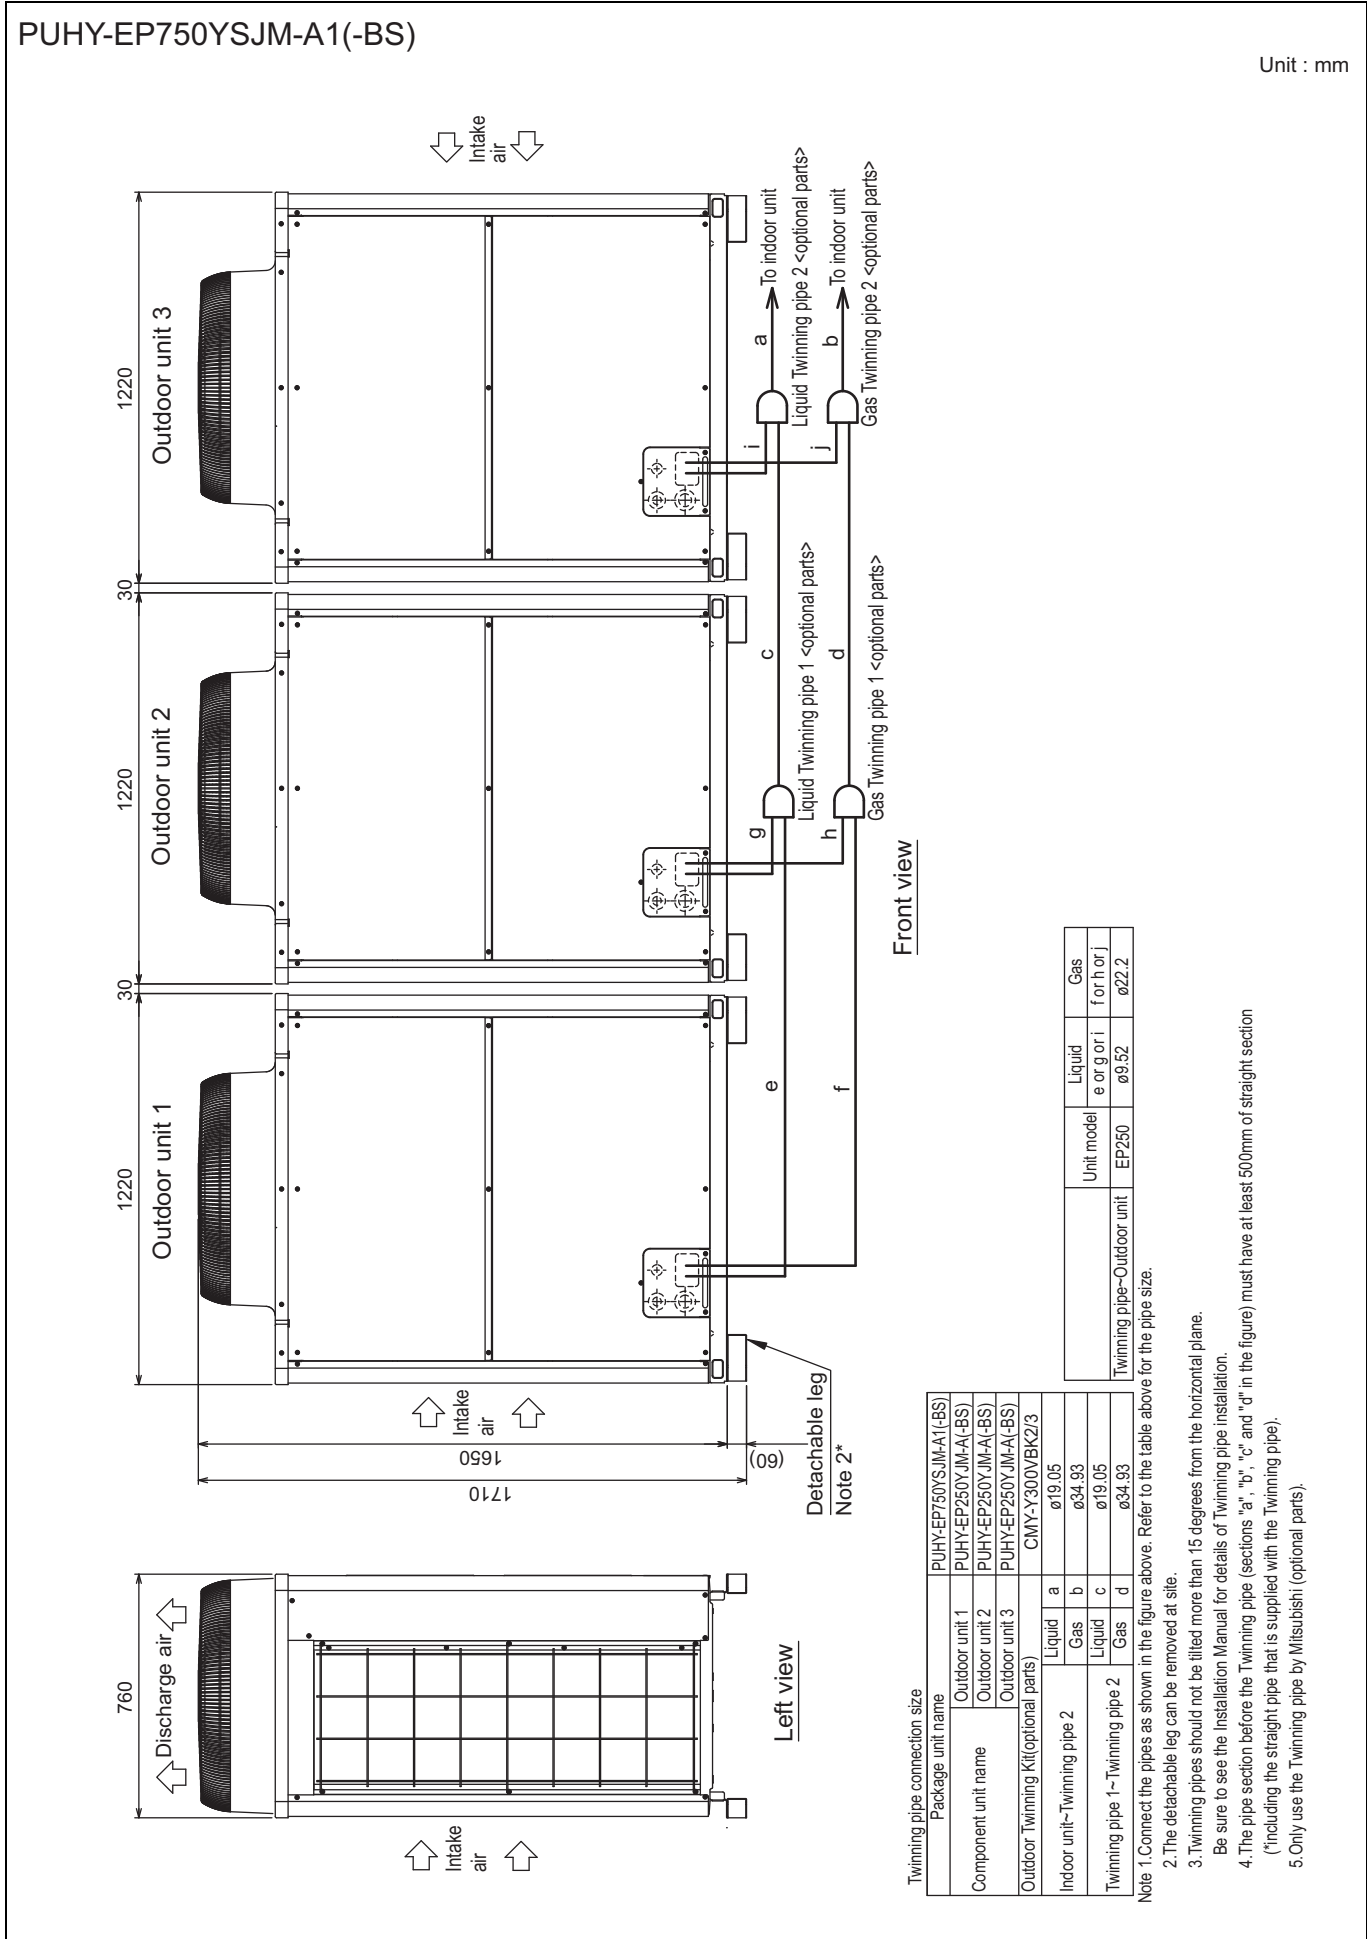

Y HIGH COP

PUHY-EP800YSJM-A(-BS)

Unit : mm

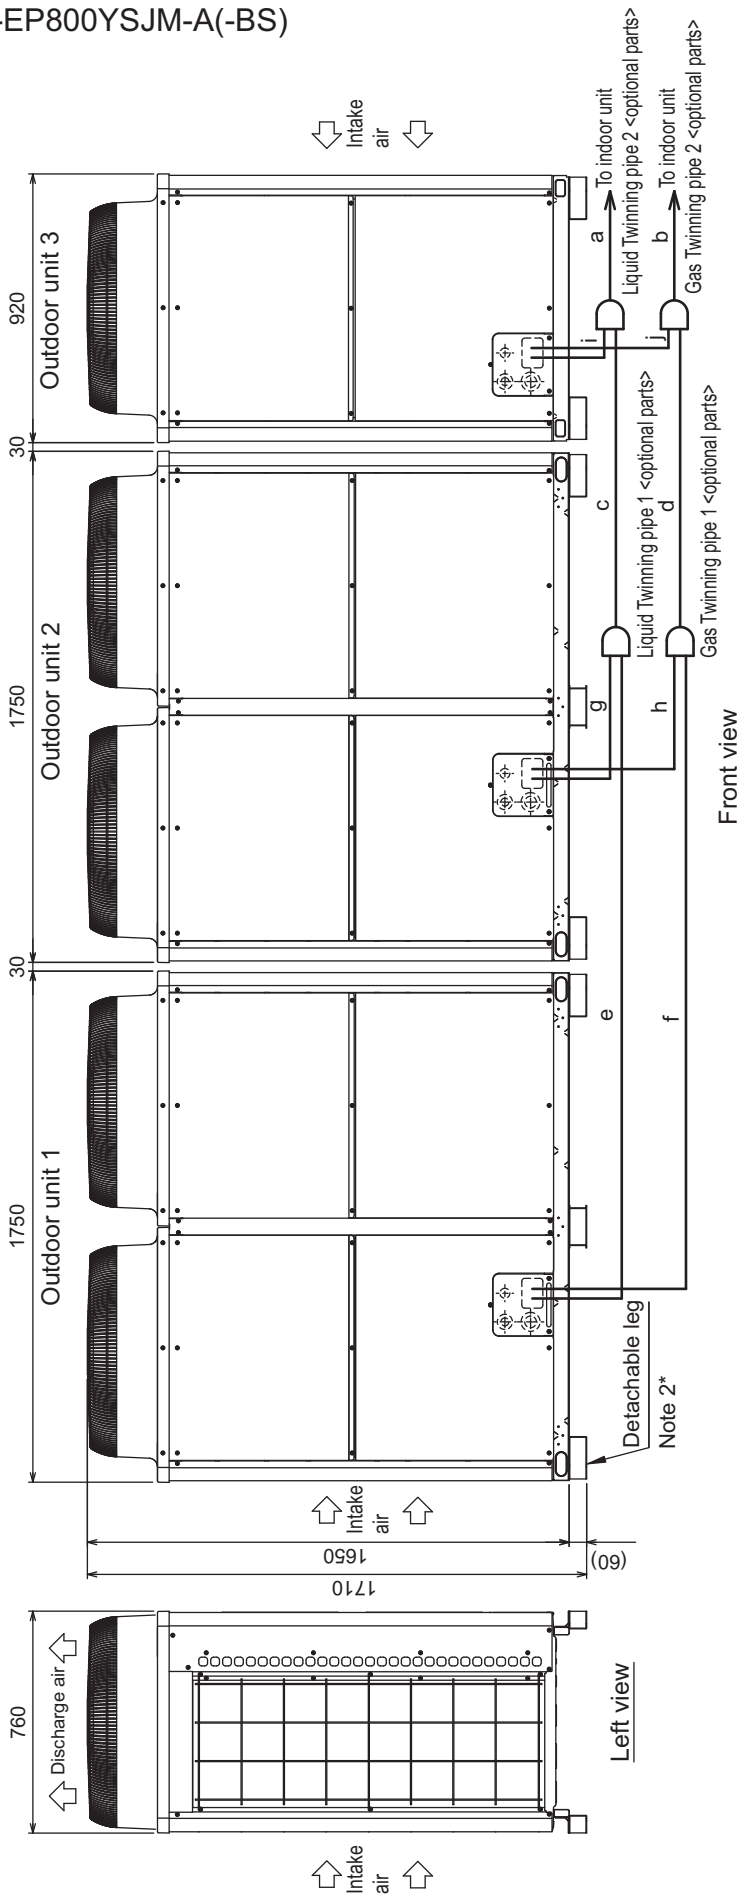

Twinning pipe connection size

Package unit name	PUHY-EP800YSJM-A(-BS)				
Outdoor unit 1	PUHY-EP300YJM-A(-BS)				
Outdoor unit 2	PUHY-EP300YJM-A(-BS)				
Outdoor unit 3	PUHY-EP200YJM-A(-BS)				
Outdoor Twinning Kit(optional parts)	CMY-Y300VBK2/3				
Indoor unit~ Twinning pipe 2	Liquid a	ø19.05	Liquid e or g or i	Unit model	Gas f or h or j
	Gas b	ø34.93			
Twinning pipe 1~ Twinning pipe 2	Liquid c	ø19.05	Gas d	Twinning pipe~Outdoor unit	EP200
	Gas d	ø34.93			

Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.

2. The detachable leg can be removed at site.

3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.


Be sure to see the Installation Manual for details of Twinning pipe installation.

4. The pipe section before the Twinning pipe (sections "a", "b", "c" and "d" in the figure) must have at least 500mm of straight section

(*including the straight pipe that is supplied with the Twinning pipe).

5. Only use the Twinning pipe by Mitsubishi (optional parts).


Y (HIGH COP)

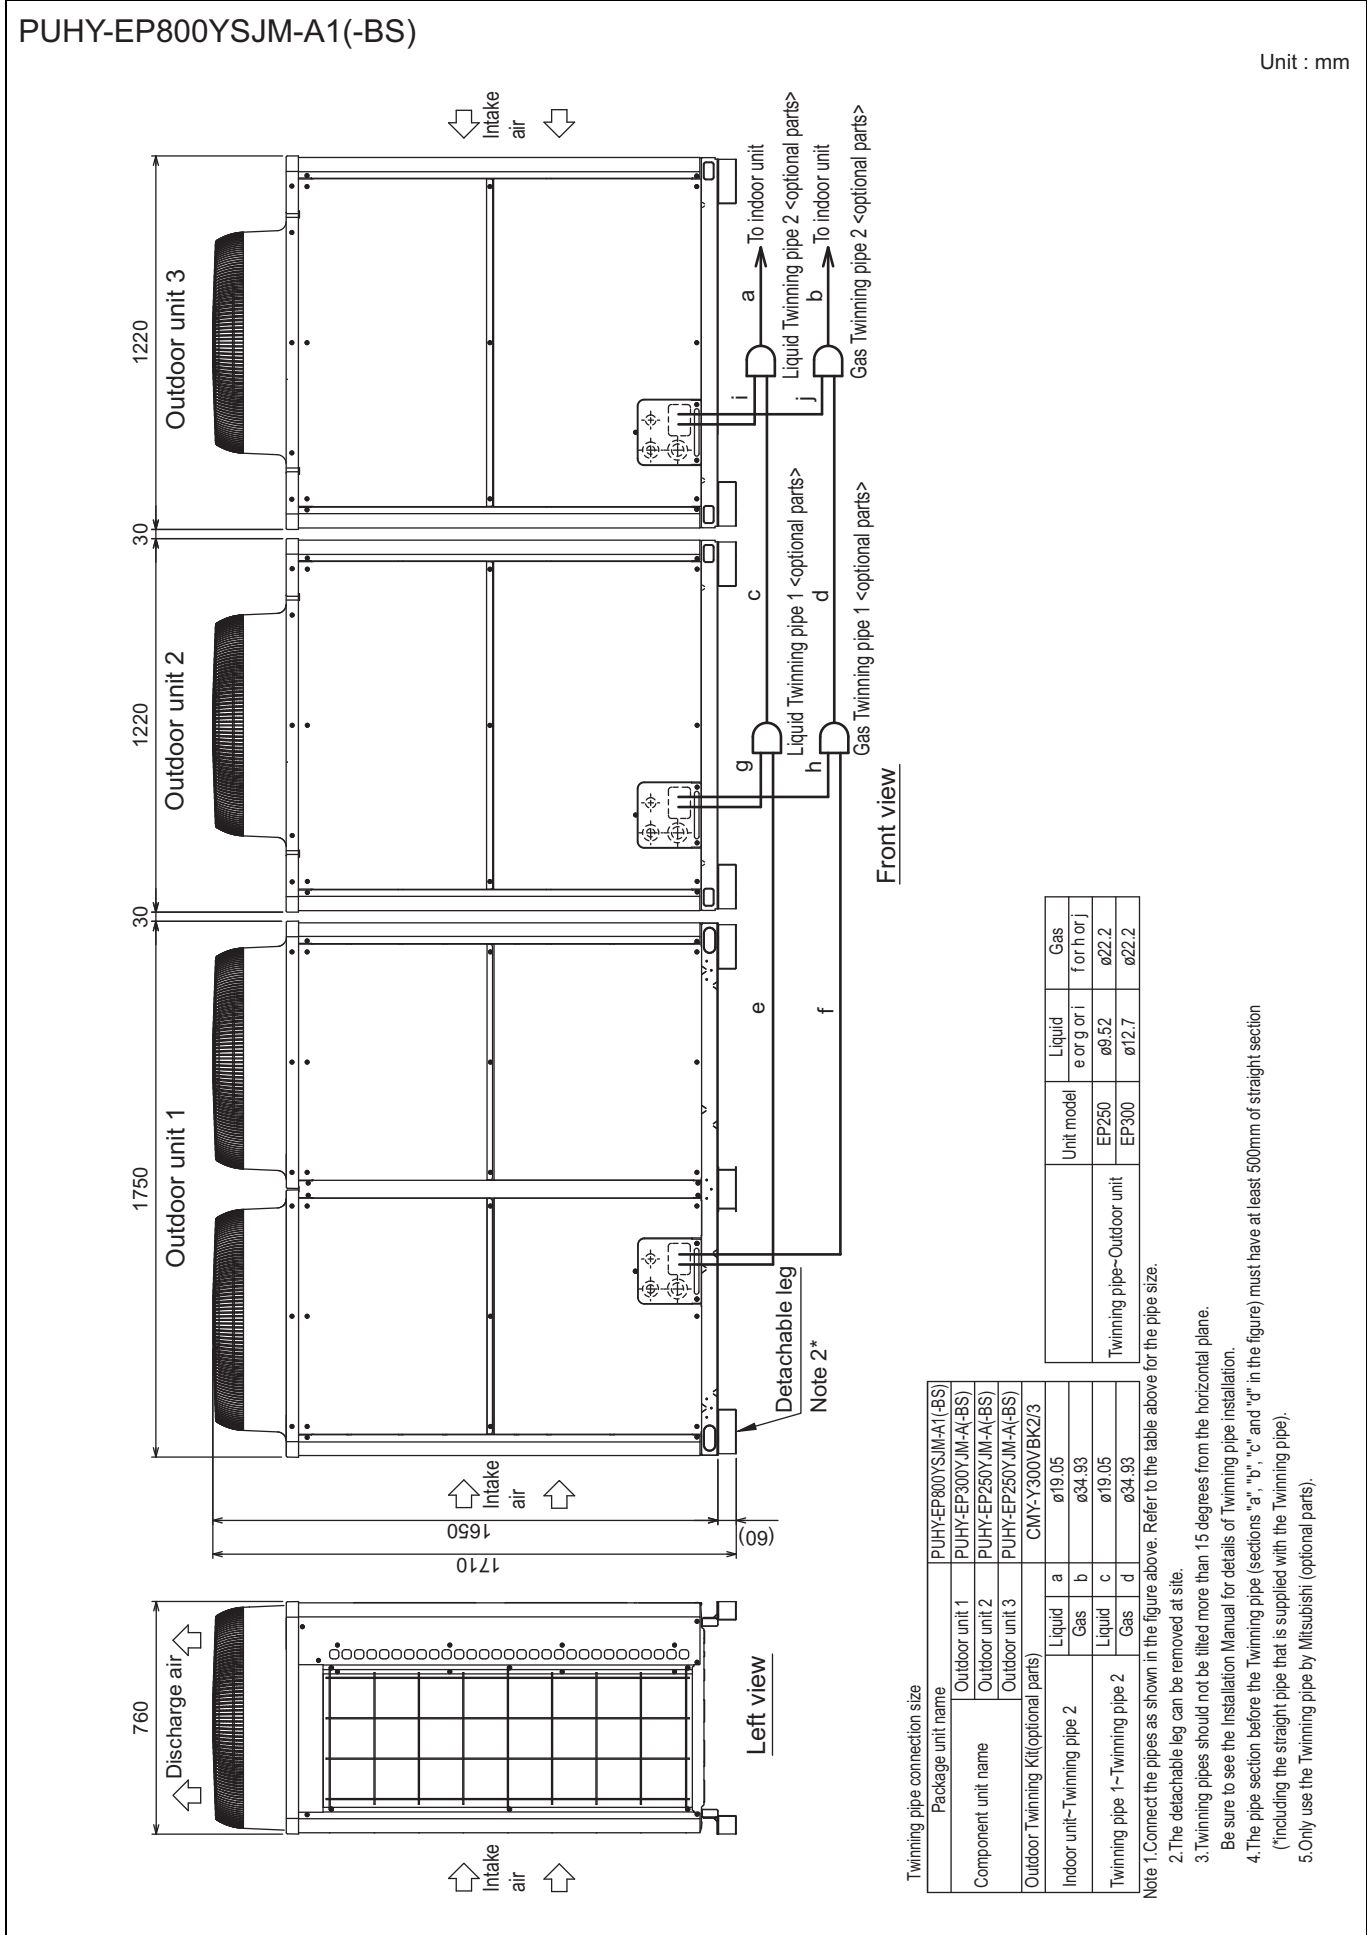

Y (HIGH COP)

PUHY-EP850YSJM-A(-BS)

Unit : mm

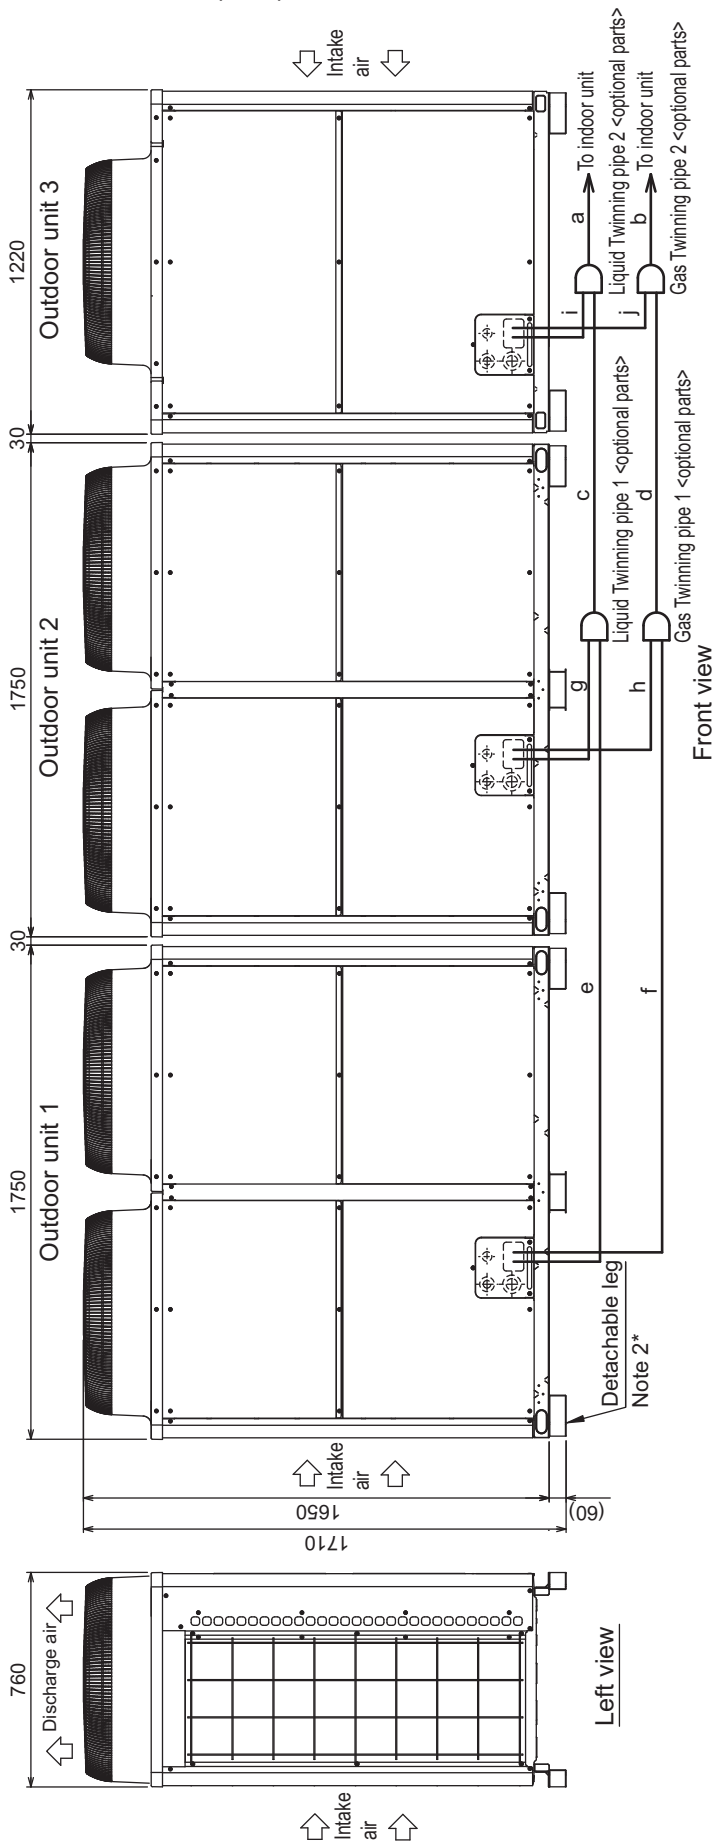

Twinning pipe connection size

Package unit name	PUHY-EP850YSJM-A(-BS)			
Component unit name	Outdoor unit 1	PUHY-EP300YJM-A(-BS)		
	Outdoor unit 2	PUHY-EP300YJM-A(-BS)		
	Outdoor unit 3	PUHY-EP250YJM-A(-BS)		
Outdoor Twinning Kit (optional parts)	CMY-Y300YBK2/3			
Indoor unit-Twinning pipe 2	Liquid	a	ø19.05	Gas
	Gas	b	ø41.28	for h or j
Twinning pipe 1-Twinning pipe 2	Liquid	c	ø19.05	ø22.2
	Gas	d	ø34.93	ø22.2

Note 1. Connect the pipes as shown in the figure above. Refer to the table above for the pipe size.

2. The detachable leg can be removed at site.

3. Twinning pipes should not be tilted more than 15 degrees from the horizontal plane.


Be sure to see the Installation Manual for details of Twinning pipe installation.

4. The pipe section before the Twinning pipe (sections "a", "b", "c" and "d" in the figure) must have at least 500mm of straight section

(*including the straight pipe that is supplied with the Twinning pipe).

5. Only use the Twinning pipe by Mitsubishi (optional parts).

Y (HIGH COP)

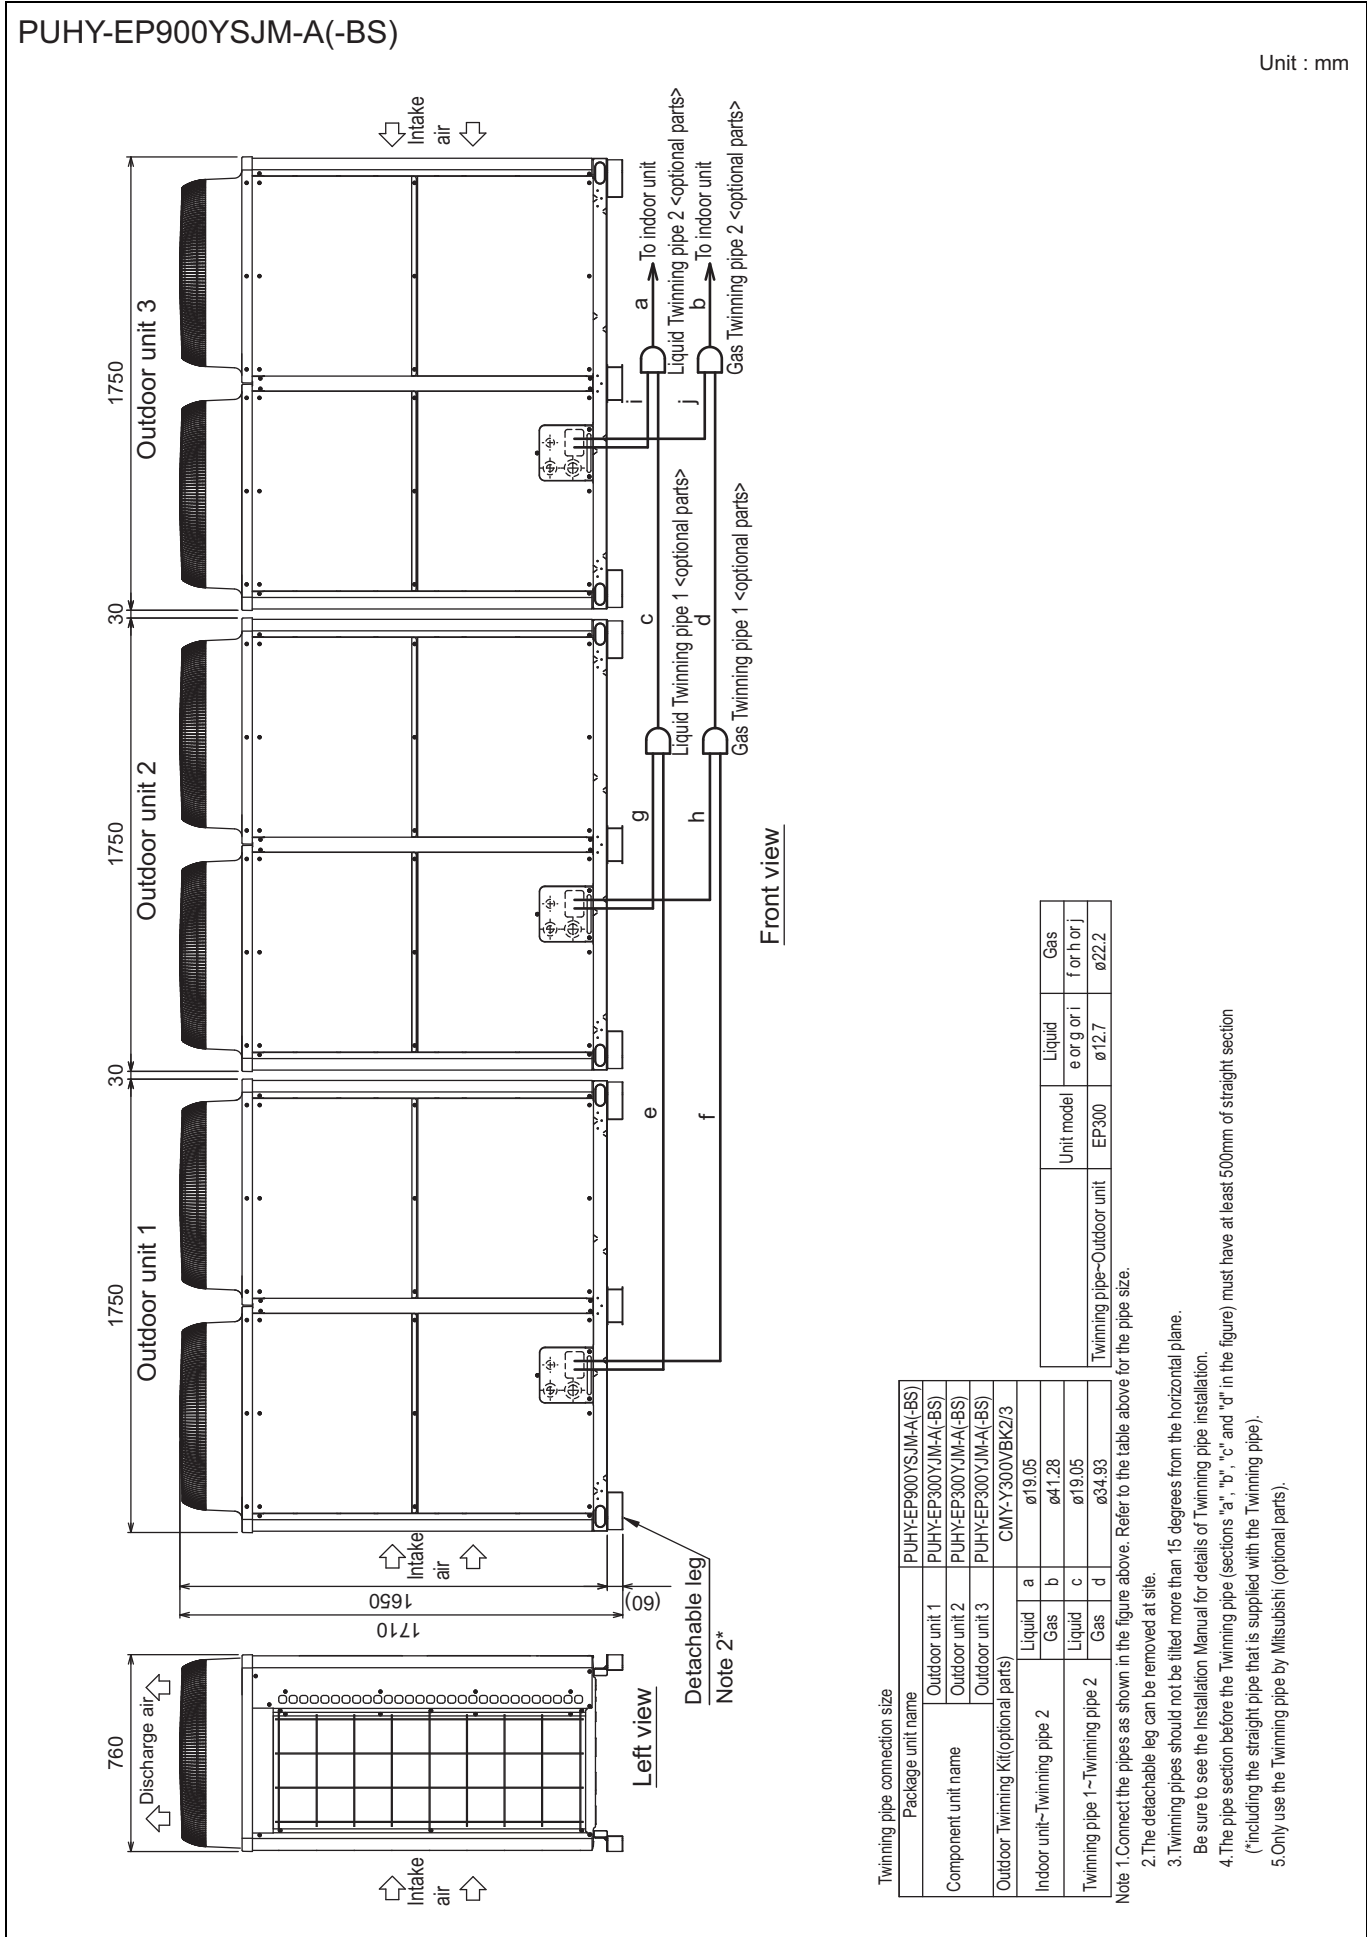

Y HIGH COP